 


**PRINT THE FOLLOWING
PAGES ON
COLORED or CARD STOCK
PAPER AND PLACE
BEFORE THE
APPROPRIATE SECTION
OF EACH MANUAL**

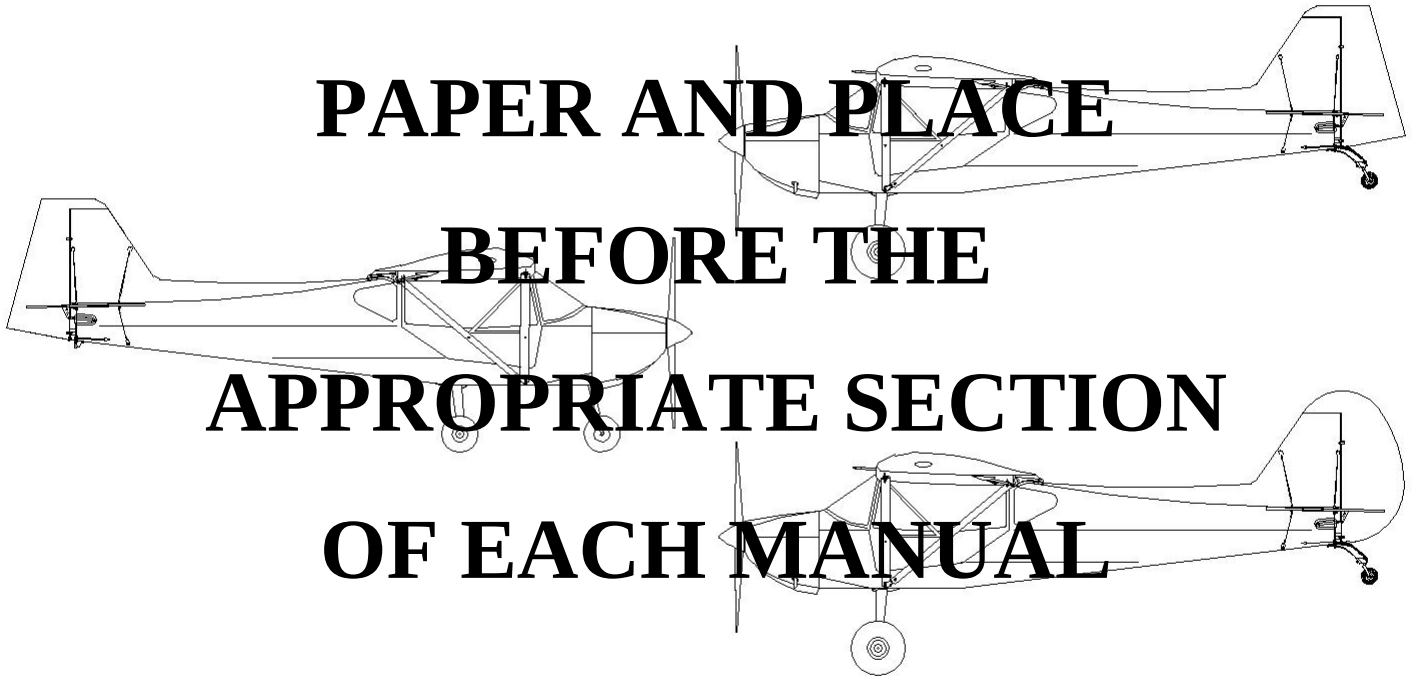

TEXT MANUAL INDEX

GENERAL00

FUSELAGE SYSTEMS.....01

CONTROL SYSTEMS02

ENGINE03

INSTRUMENTS - PITOT/STATIC04

WING05

BOOT COWL & PANEL06

WINDSHIELD & DOORS07

COVERING08


SEAT BELTS & INTERIOR09

OPTIONS10

RIGGING11


WEIGHT & BALANCE12

 OPERATIONS.....13

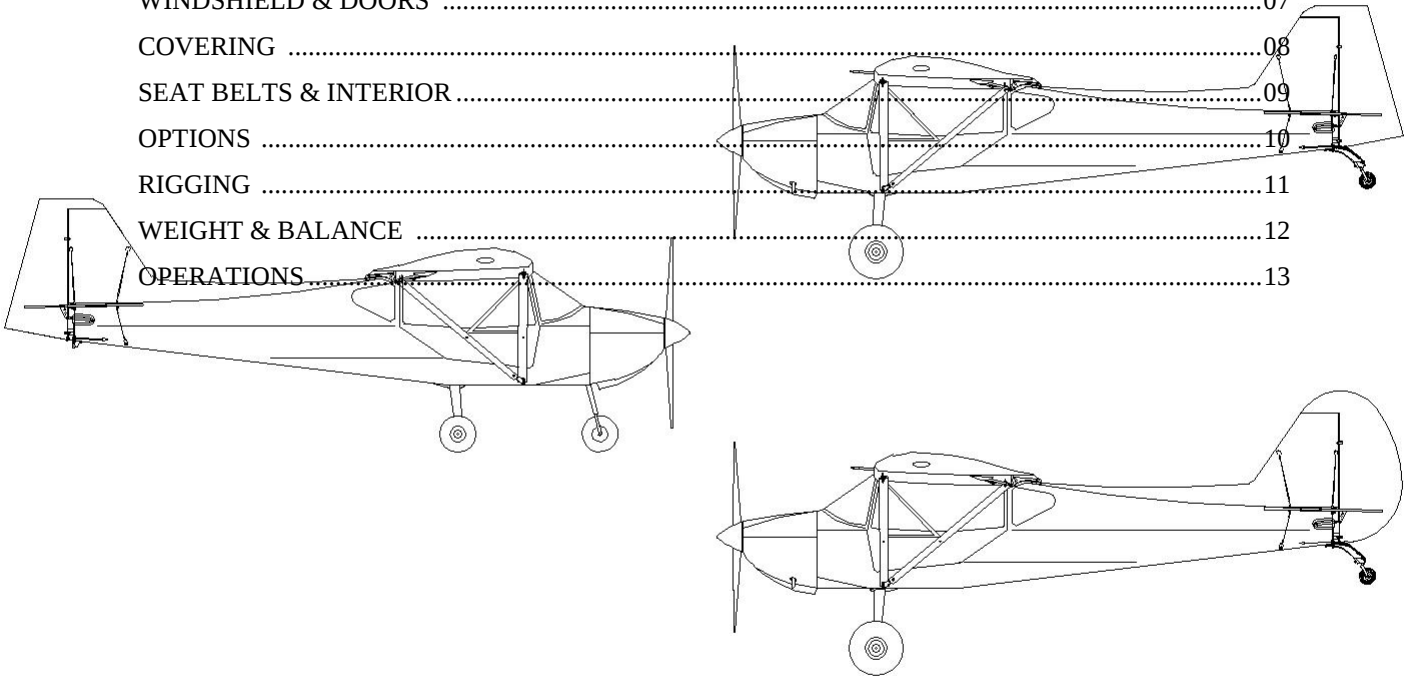


00 - GENERAL INFO

HOW DO I ASSEMBLE THE MANUAL?	00-01
REVISION FORM	00-04
RANS DESIGNS - CONTACT INFORMATION	00-05
RANS AIRCRAFT TECHNICAL SUPPORT	00-06
TOOL LIST	00-07
RECOMMENDED AVIONICS LIST	00-09
S-20 RAVEN - GENERAL INFORMATION	00-10
ENGINEERING DEPARTMENT DRAWING NUMBERING SYSTEM	00-11
IMPORTANT: PLEASE READ	00-12
AIRCRAFT REGISTRATION	00-15
FINAL INSPECTION	00-19
SAMPLE CHECKLIST FOR A CONDITION INSPECTION	00-23
NUMBERING AND PLACARDS	00-27
AIRCRAFT INSTRUMENT MARKINGS & COCKPIT PLACARDS	00-29
OPERATING LIMITATIONS	00-32
REPAIRMAN'S CERTIFICATION	00-35
ROTAX ENGINE WARRANTY INFORMATION	00-36
S-20 ASSEMBLY FLOW CHART - GENERAL	00-37
S-20 ASSEMBLY FLOW CHART - DETAILED	00-38

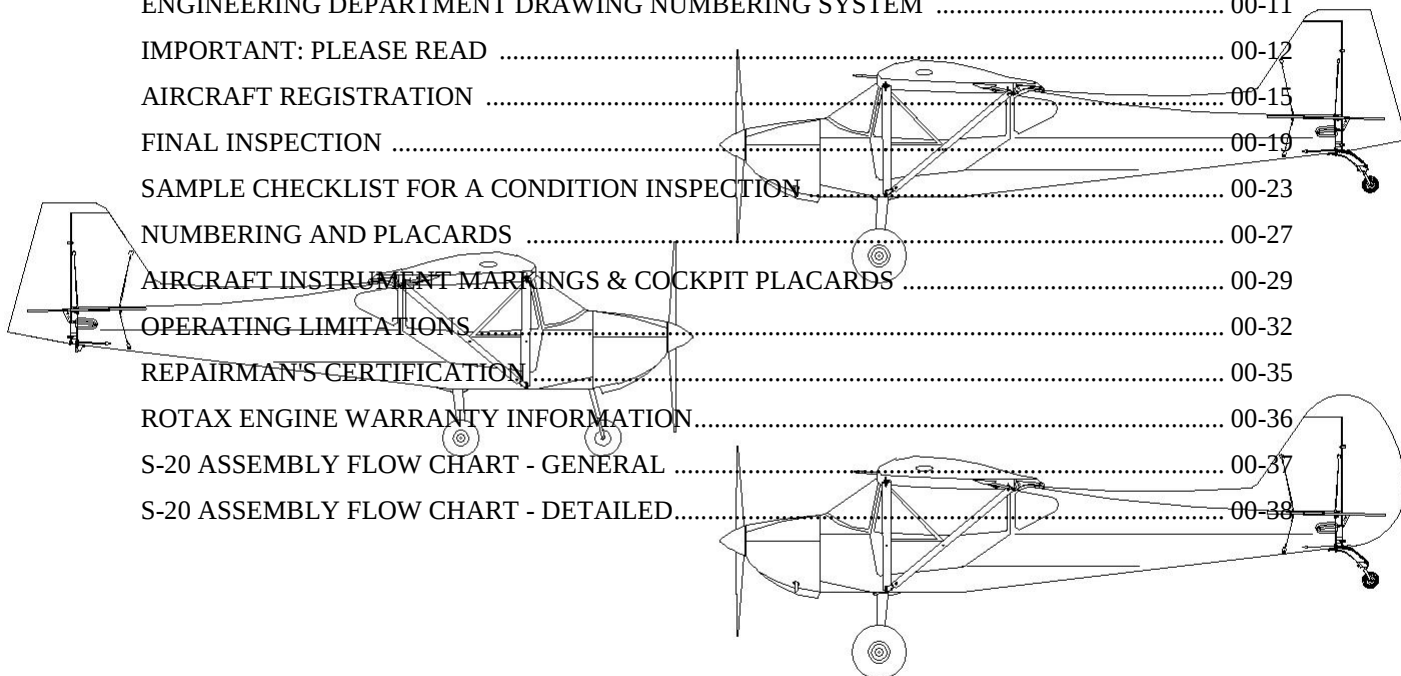 


01 - FUSELAGE SYSTEMS

FUSELAGE FORMER INSTALLATION	01-01
ELT & COMMUNICATIONS ANTENNA MOUNT INSTALLATION	01-04
BAGGAGE WINDOW INSTALLATION	01-05
MAIN GEAR ASSEMBLY AND INSTALLATION	01A-01
TAILWHEEL, NOSE GEAR & TAIL TIE-DOWN ASSEMBLY AND INSTALL	01B-01
HORIZONTAL STABILIZER & ELEVATOR ASSEMBLY AND INSTALL	01C-01
TRIM TAB ASSEMBLY AND INSTALLATION	01D-01
FLOORBOARD INSTALLATION	01E-01
RUDDER PEDAL INSTALLATION	01F-01
RUDDER SYSTEM ASSEMBLY AND INSTALLATION	01G-01
HYDRAULIC BRAKE INSTALLATION	01H-01
BAGGAGE COMPARTMENT	01I-01
AFT BAGGAGE COMPARTMENT	01I-01
FORWARD BAGGAGE COMPARTMENT	01I-02
CARGO NET	01I-03
SLIDING SEAT ASSEMBLY	01J-01
OPTIONAL HEADREST ASSEMBLY	01J-03
OPERATION OF SLIDING SEAT	01J-04
FUEL SYSTEM - FUSELAGE	01K-01
OPTIONAL ELECTRIC FUEL PUMP	01K-03

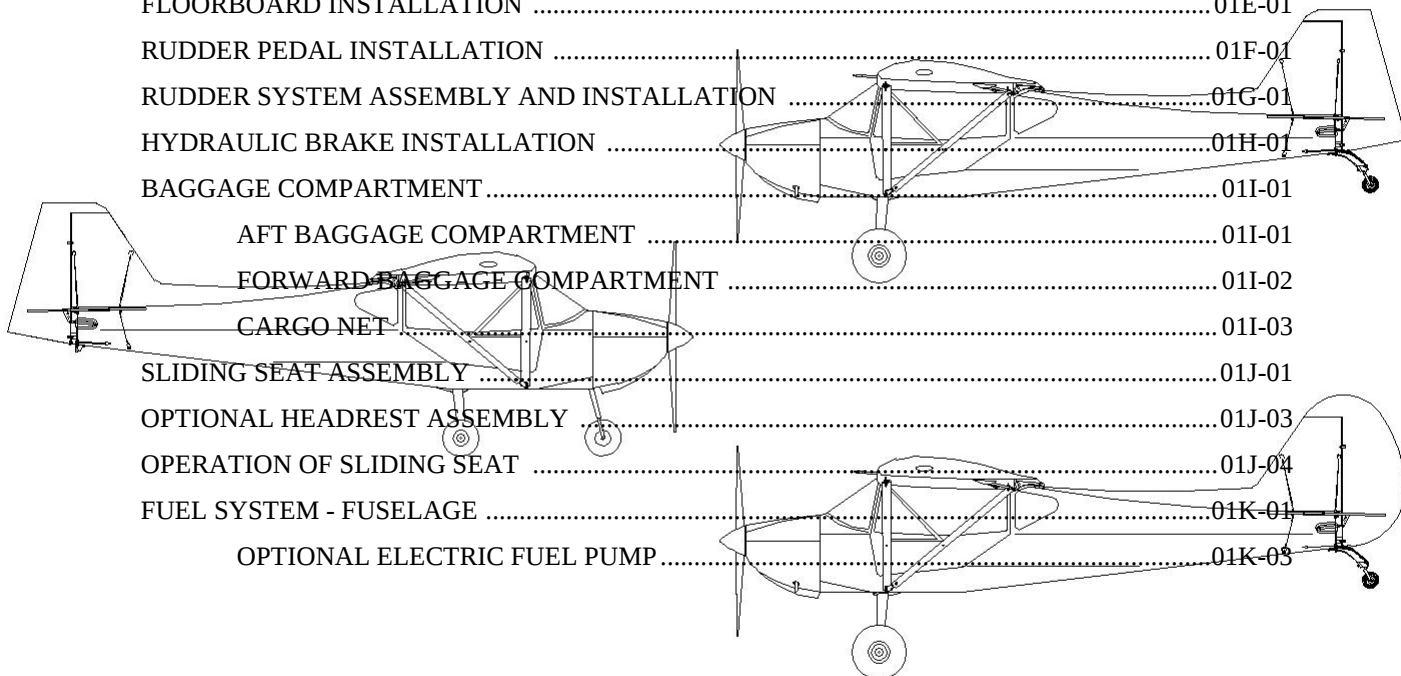 

02 - CONTROL SYSTEMS


CONTROL STICK ASSEMBLY & INSTALLATION	02-01
CONTROL STICK PUSH-PULL TUBE ASSEMBLY & INSTALLATION	02A-01
ELEVATOR PUSH-PULL TUBE ASSEMBLY & INSTALLATION	02B-01
AILERON CABLE SYSTEM INSTALLATION - FUSELAGE	02C-01
FLAP LEVER ASSEMBLY AND INSTALLATION	02D-01

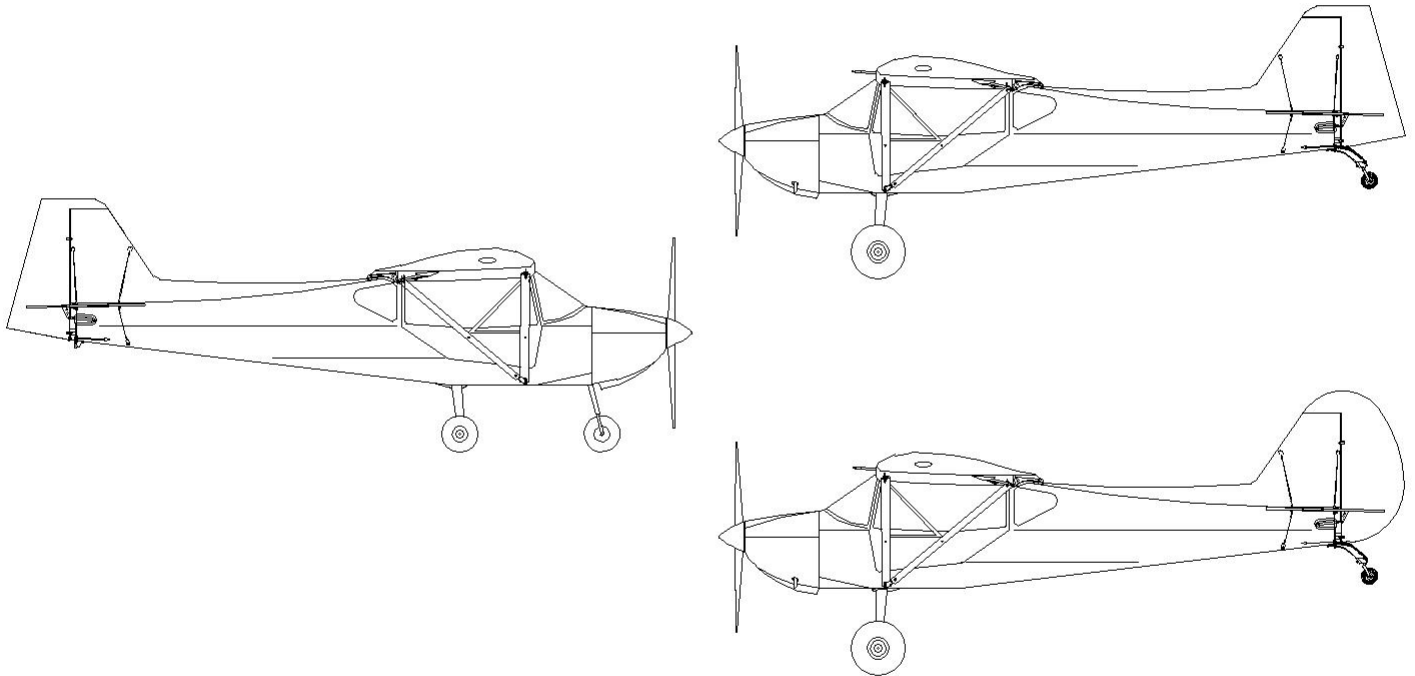 

03 - ENGINE


ROTAX 912ULS

ENGINE MOUNT INSTALLATION	03-01
ENGINE ACCESSORY INSTALLATION	03A-01
FUEL SYSTEM - FIREWALL FORWARD	03B-01
COOLING SYSTEM INSTALLATION	03C-01
OPTIONAL HEATER INSTALLATION - RADIANT STYLE	03C-02
LUBRICATION SYSTEM INSTALLATION	03D-01
MUFFLER ASSEMBLY	03E-01
OPTIONAL MUFFLER HEATER INSTALLATION	03F-01
THROTTLE CONTROL ASSEMBLY	03G-01
CHOKE CONTROL ASSEMBLY	03H-01
BATTERY BOX ASSEMBLY & INSTALLATION	03I-01
ENGINE ELECTRICAL	03J-01
12" SPINNER ASSEMBLY	03K-01
COWLING ASSEMBLY & INSTALLATION	03L-01
PROPELLER INSTALLATION	03M-01

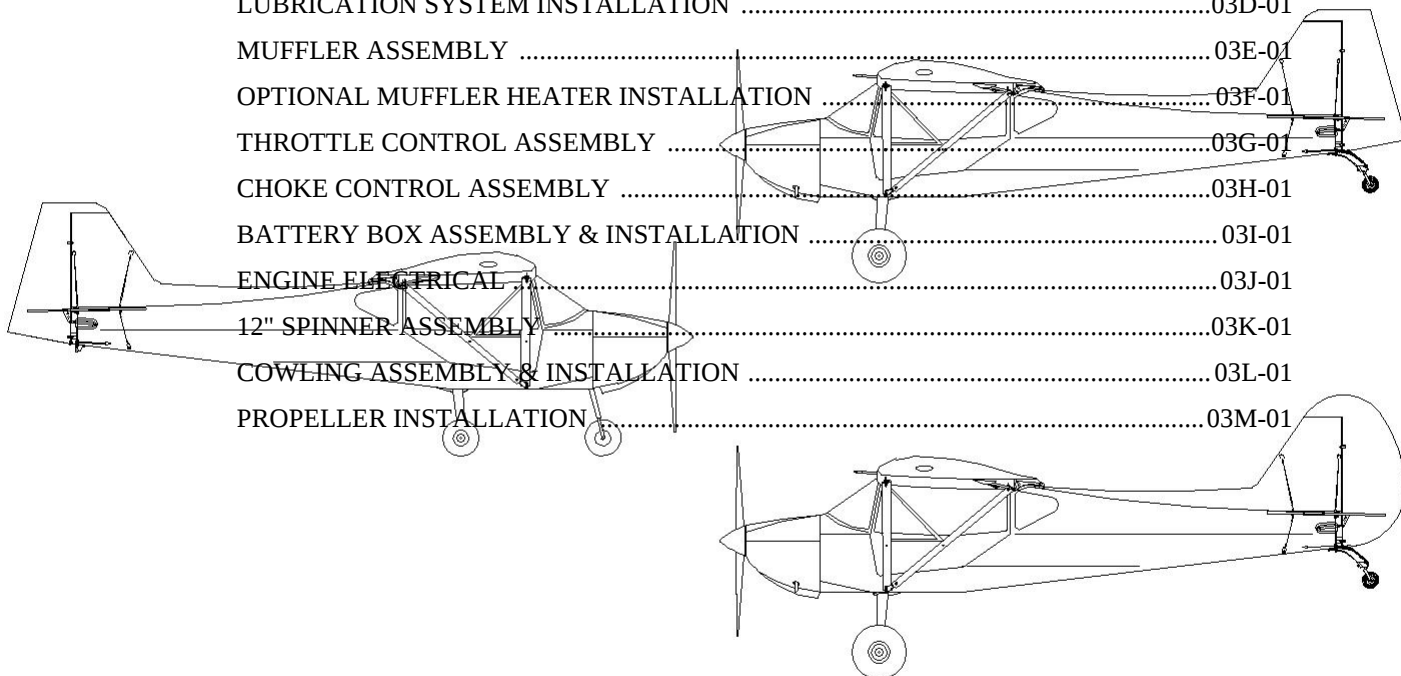 


04 - INSTRUMENTS - PITOT/STATIC

 INSTRUMENTS AND ELECTRICAL 04-01

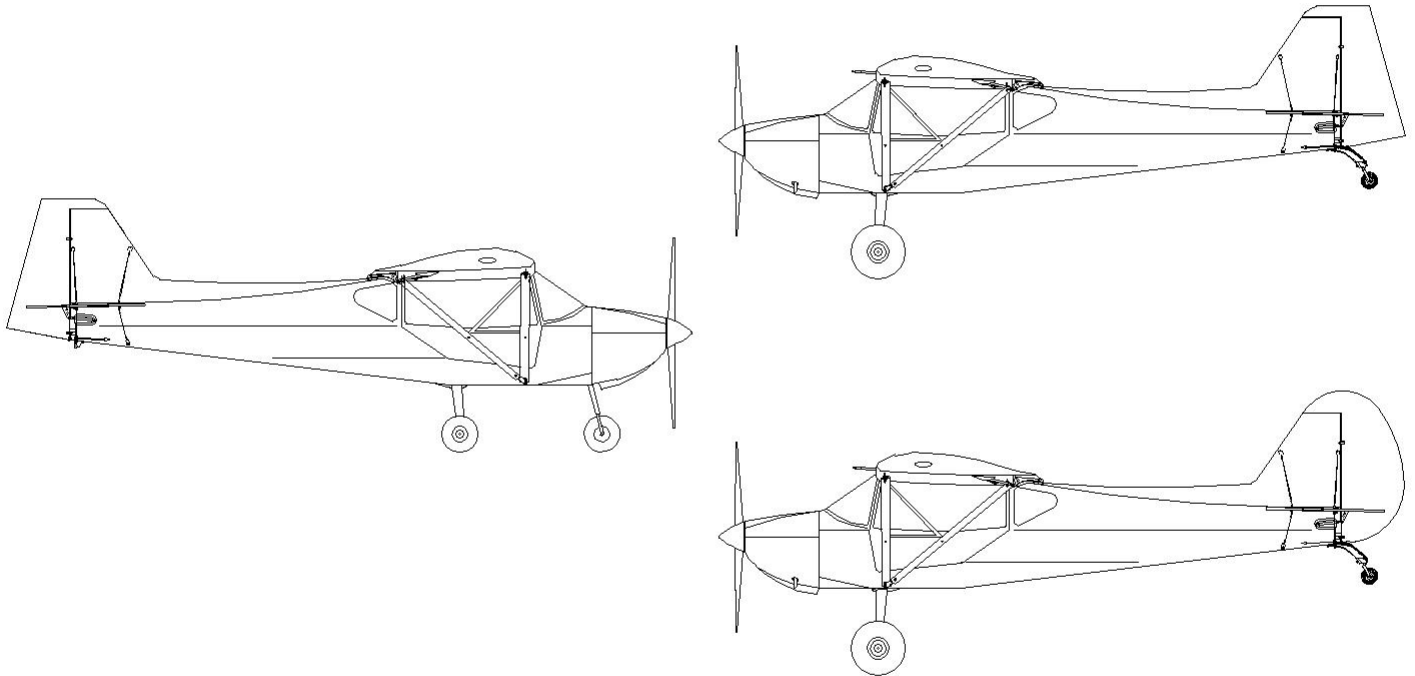




05 - WING

MAIN STRUCTURE ASSEMBLY	05-01
FUEL TANK ASSEMBLY AND INSTALLATION	05A-01
AILERON BELLCRANK AND CABLE INSTALL - WING	05B-01
RIB & SHEET METAL INSTALLATION	05C-01
AILERON AND FLAP ASSEMBLY AND INSTALLATION	05D-01
LIFT STRUT ASSEMBLY	05E-01
WING TIP ASSEMBLY AND INSTALLATION	05F-01
ROOT SKIN INSTALLATION	05G-01
WING INSTALLATION	05H-01

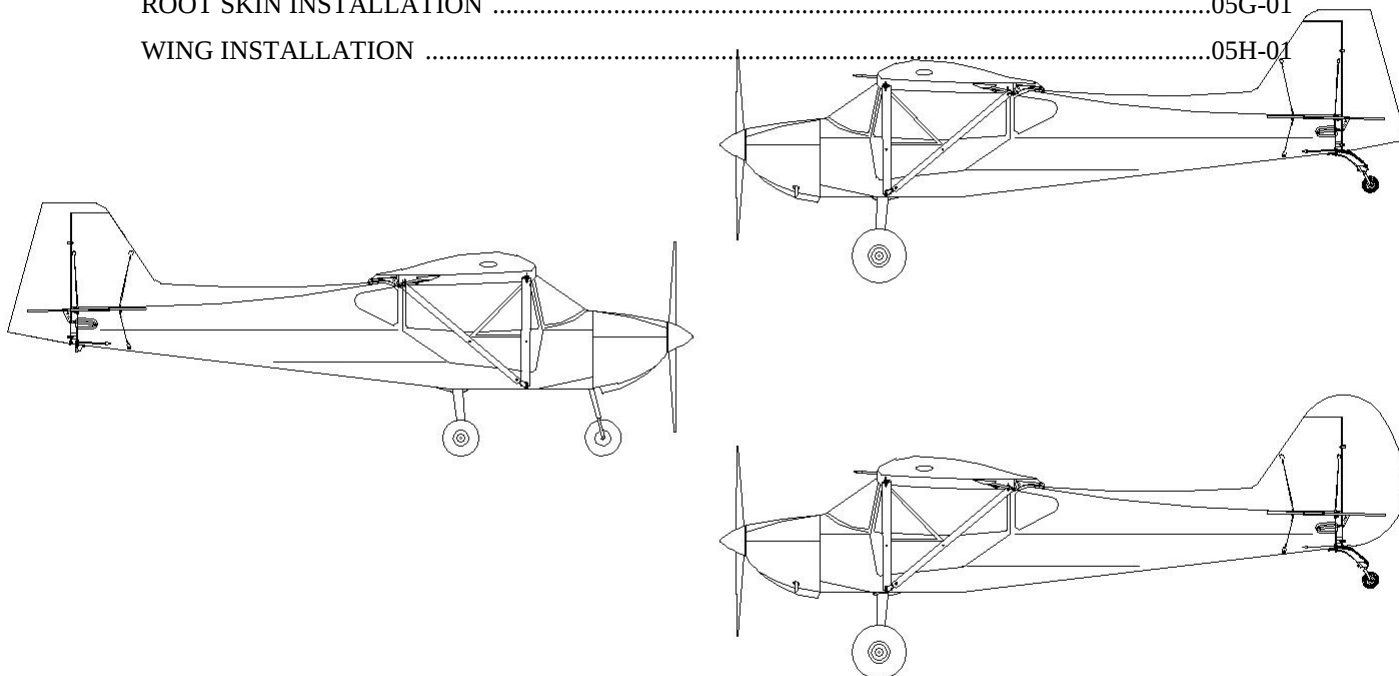 

06 - BOOT COWL & PANEL

BOOT COWL ASSEMBLY	06-01
INSTRUMENT PANEL INSTALLATION	06A-01
SUB-PANEL & RADIO MOUNT PLATES INSTALLATION	06A-03

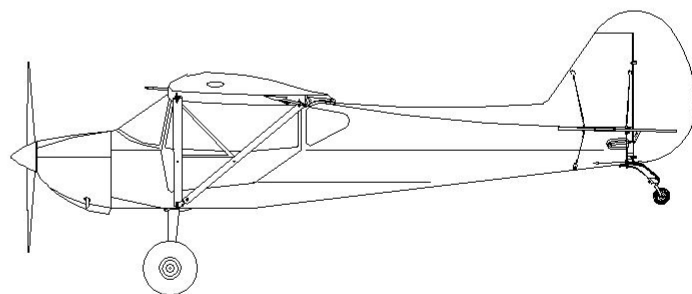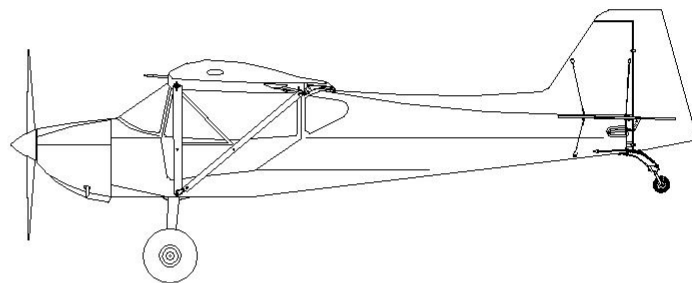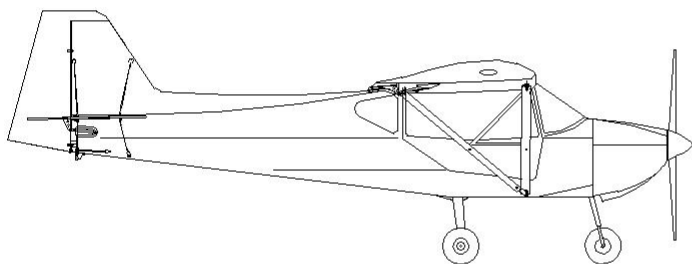   


07 - WINDSHIELD & DOORS

WINDSHIELD & SKYLIGHT INSTALLATION 07-01

WING CUFF INSTALLATION 07-06




DOOR ASSEMBLY - LEXAN AND TRIM07A-01

 DOOR LATCH ASSEMBLY07A-03

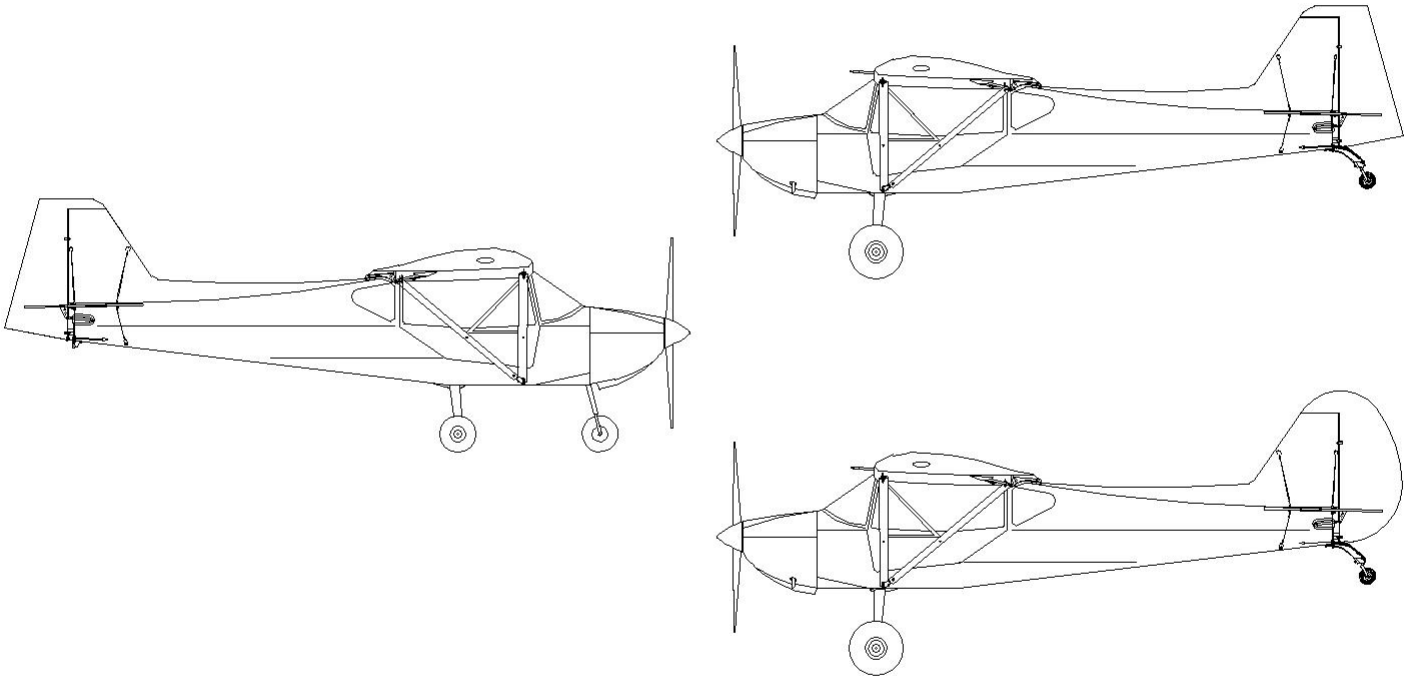


08 - COVERING

GENERAL INFORMATION	08-01
WINGS	08A-01
AILERONS AND FLAPS	08B-01
FUSELAGE	08C-01
HORIZONTAL STABILIZERS	08D-01
RUDDER	08E-01
ELEVATOR	08F-01

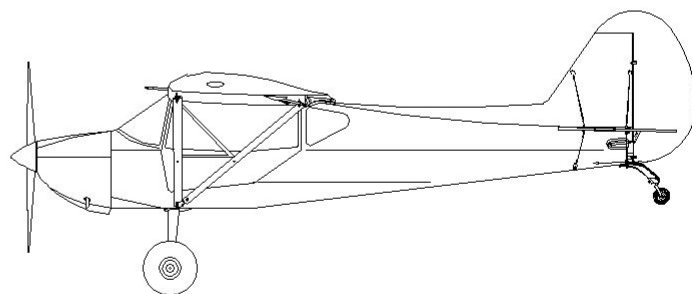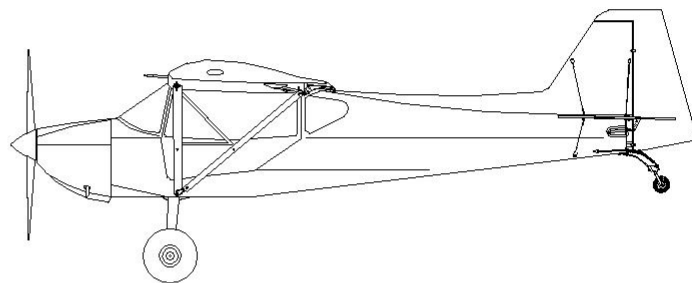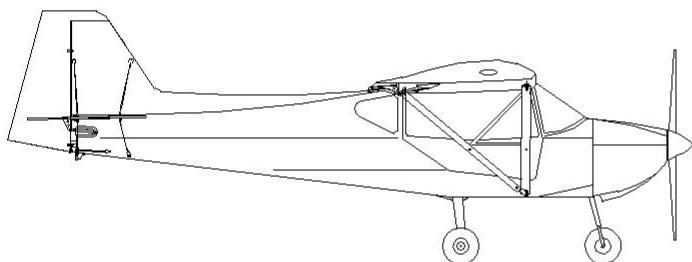   

09 - SEAT BELTS & INTERIOR

 SEAT BELT INSTALLATION 09-01

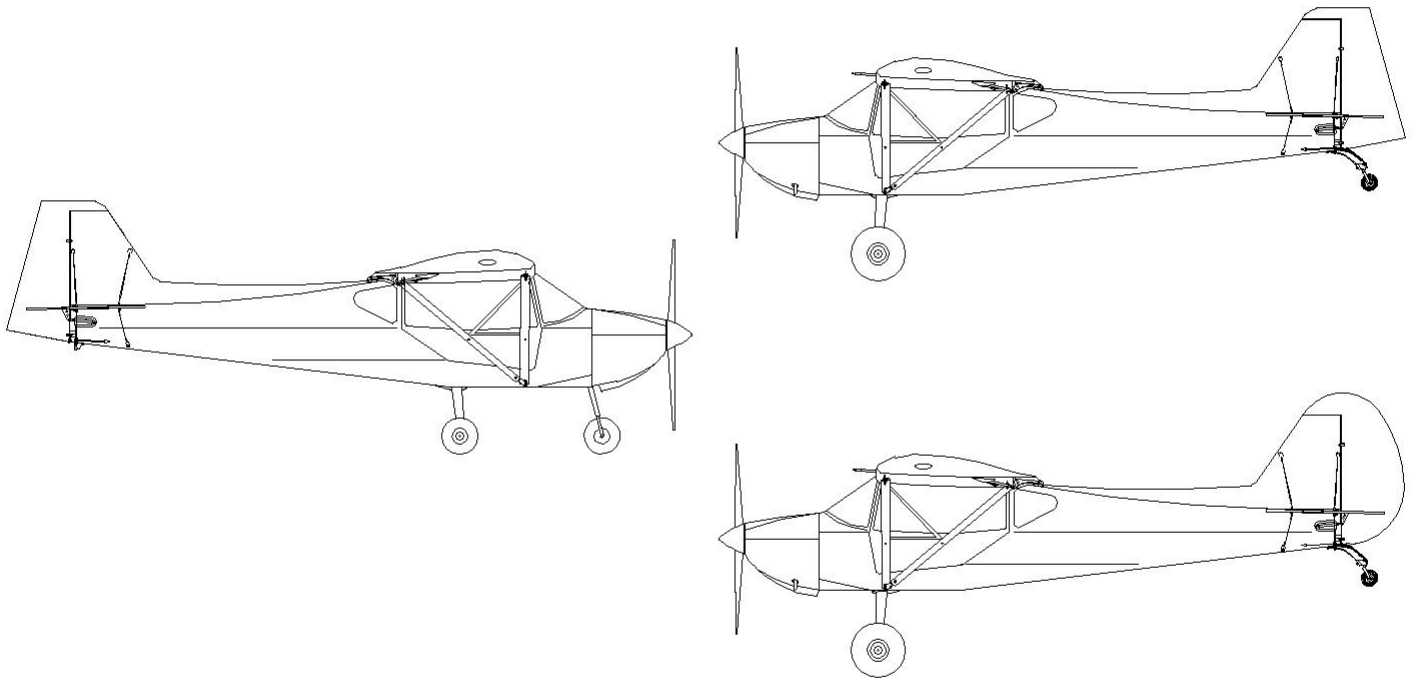

10 - OPTIONS

AVEO STROBE INSTALLATION 10-01

LANDING LIGHT INSTALLATION10A-01

PASSENGER SEAT ELECTRIC ELEVATOR TRIM10B-01

 
TIE DOWN SHACKLE INSTALLATION10C-01

COVER / PAINT STANDS10D-01

26" ALASKAN WHEEL ASSEMBLY AND INSTALLATION 10E-01


10" TIRE OPTION ASSEMBLY AND INSTALLATION 10F-01

10" PNEUMATIC TAIL WHEEL ASSEMBLY AND INSTALLATION10G-01

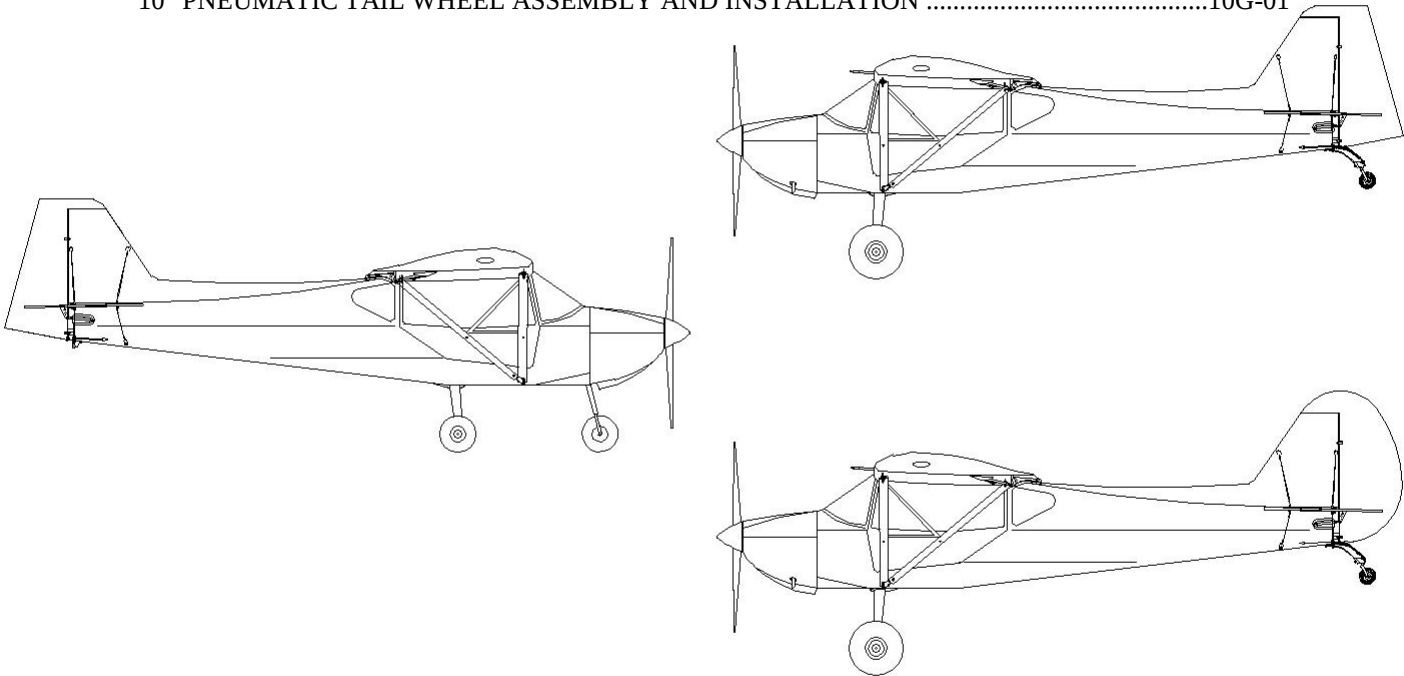




11 - RIGGING

RIGGING AND PREPARATION FOR FLIGHT	11-01
ELEVATOR MASS BALANCE	11-01
WINGS	11A-01
WINGS WASHOUT RIGGING	11A-01
AILERON RIGGING	11A-02
FLAP RIGGING	11A-03
TAIL SURFACES	11B-01
TAIL ALIGNMENT AND ROD TENSION	11B-01
ELEVATOR	11B-02
ELEVATOR TRIM TAB	11B-04
RUDDER	11B-04
CONTROLS	11C-01
CABIN HEAT	11C-01
PARK BRAKE	11C-01
THROTTLE	11C-01
CHOKE	11C-01

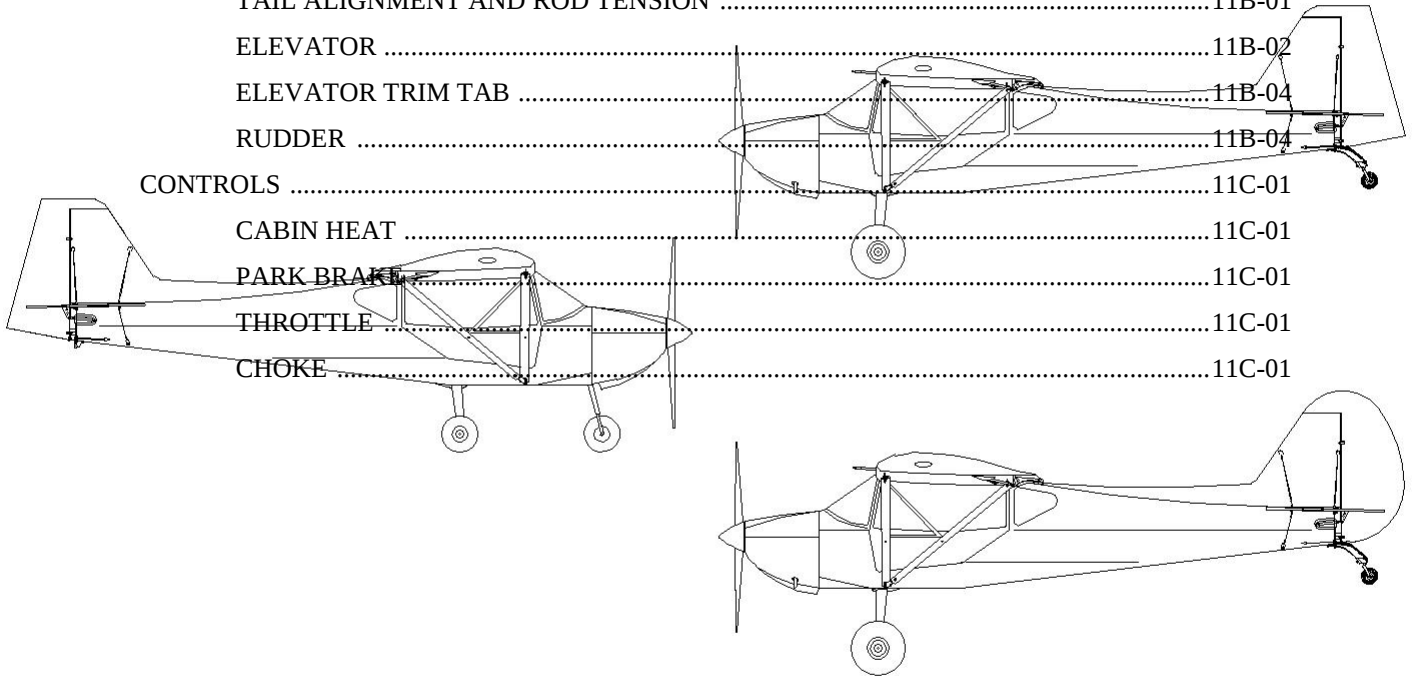 

12 - WEIGHT & BALANCE

WEIGHT AND BALANCE	12-01
INTRODUCTION.....	12-01
AIRPLANE WEIGHING PROCEDURES	12-02
WEIGHT AND BALANCE	12-03

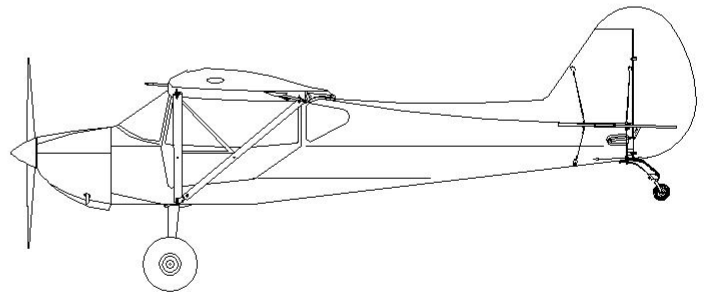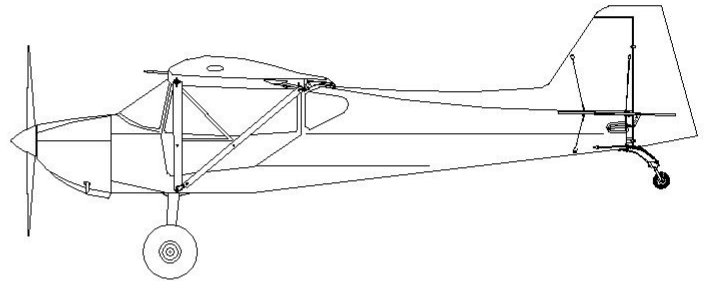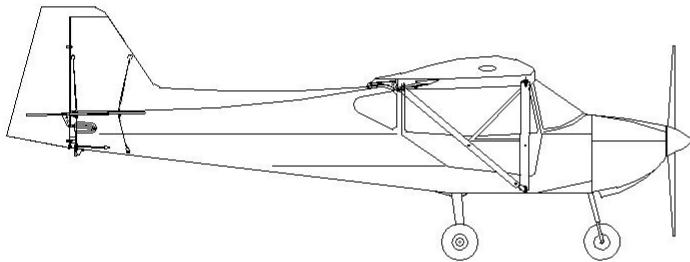   

PARTS MANUAL INDEX

GENERAL000

FUSELAGE SYSTEMS.....001

CONTROL SYSTEMS002

ENGINE003

INSTRUMENTS - PITOT/STATIC004

WING.....005


BOOT COWL & PANEL006

WINDSHIELD & DOORS007

COVERING008

SEAT BELTS & INTERIOR.....009

 
OPTIONS010

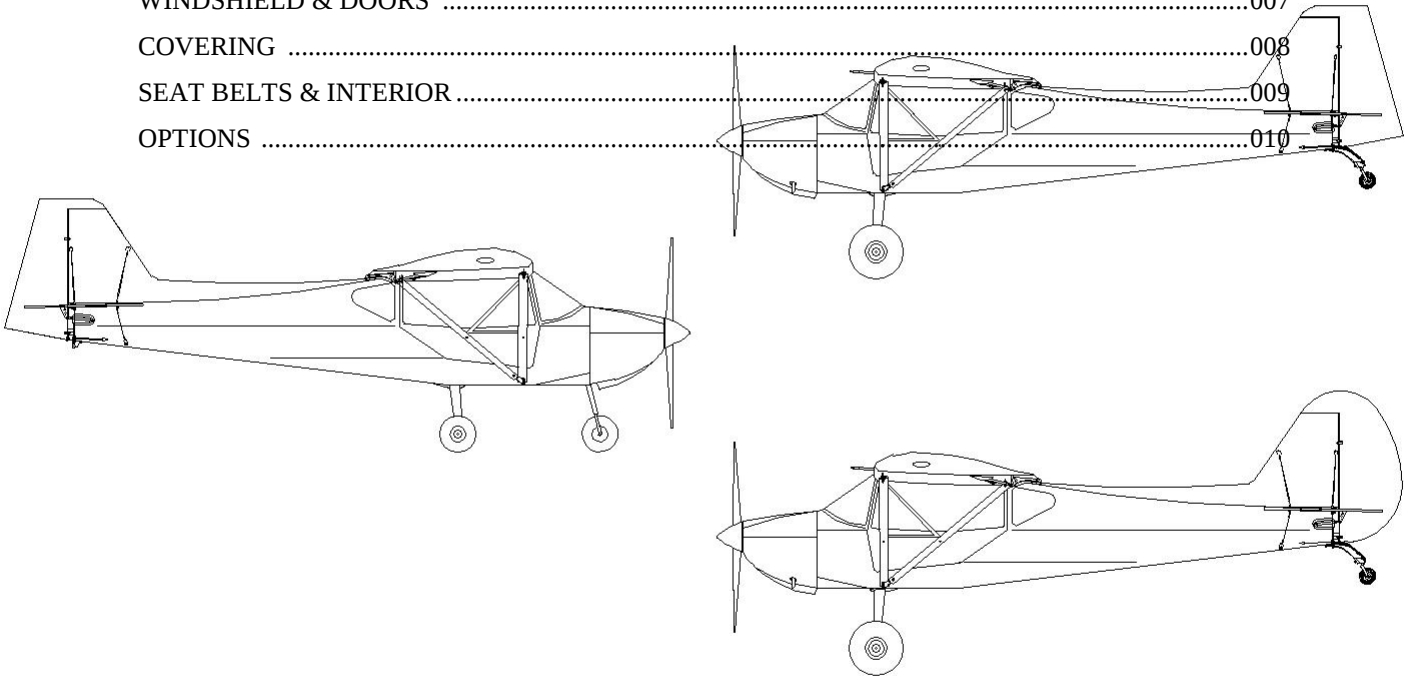

000 - GENERAL INFO


GENERAL 000-01

 PLACARDS / LABELS / MARKERS..... 000-02

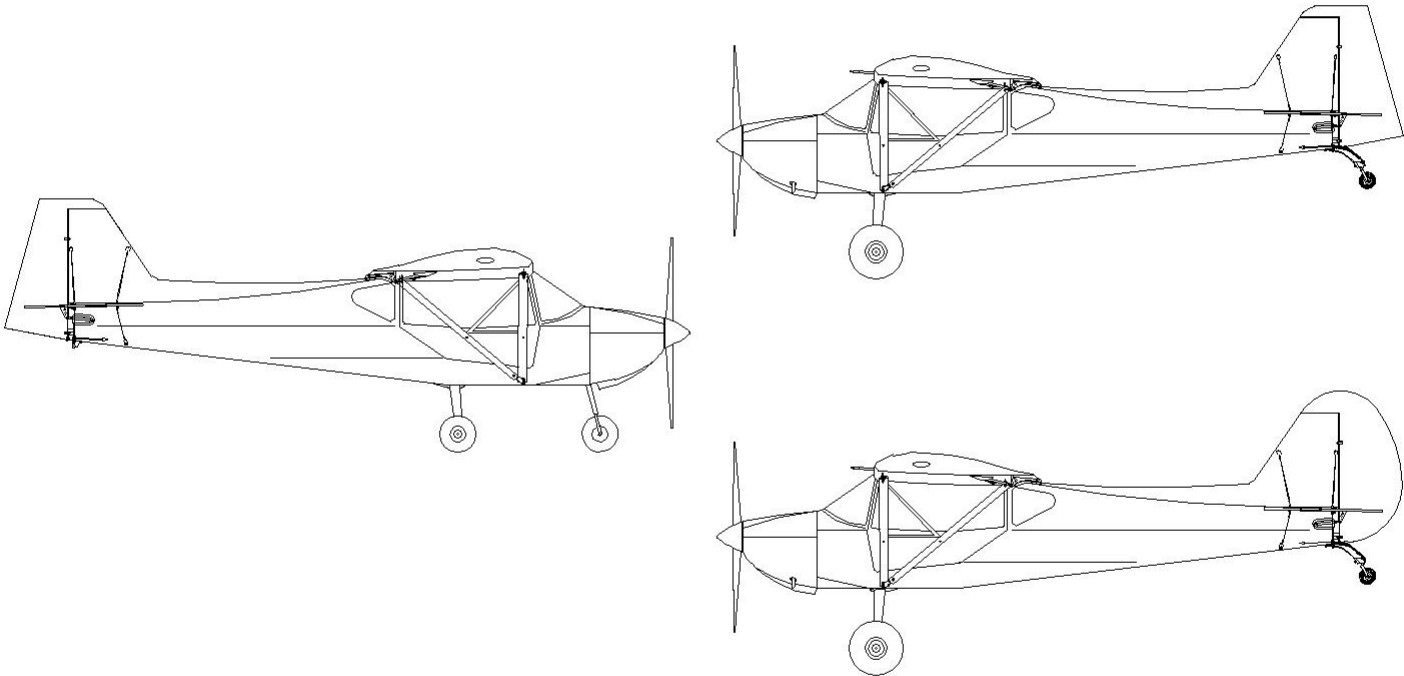


001 - FUSELAGE SYSTEMS

FUSELAGE FORMER INSTALLATION	001-01
ELT & COMMUNICATIONS ANTENNA MOUNT INSTALLATION	001-03
BAGGAGE WINDOW INSTALLATION	001-05
TAILDRAGGER - MAIN GEAR ASSEMBLY AND INSTALLATION	001A-01
TRIKE - MAIN GEAR ASSEMBLY AND INSTALLATION	001A-03
TAIL WHEEL ASSEMBLY & INSTALLATION	001B-01
NOSE GEAR ASSEMBLY & INSTALLATION.....	001B-03
TAIL TIE-DOWN INSTALLATION	001B-05
HORIZONTAL STABILIZER AND ELEVATOR ASSEMBLY AND INSTALL	001C-01
TRIM TAB ASSEMBLY & INSTALLATION	001D-01
FLOORBOARD INSTALLATION	001E-01
RUDDER PEDAL INSTALLATION	001F-01
RUDDER SYSTEM ASSEMBLY & INSTALLATION	001G-01
HYDRAULIC BRAKE INSTALLATION	001H-01
AFT BAGGAGE COMPARTMENT ASSEMBLY	001I-01
AFT BAGGAGE COMPARTMENT INSTALLATION	001I-03
SIDES - FORWARD BAGGAGE COMPARTMENT INSTALLATION	001I-05
FLOOR - FORWARD BAGGAGE COMPARTMENT INSTALLATION	001I-07
CARGO NET INSTALLATION	001I-09
SLIDING SEAT ASSEMBLY	001J-01
OPTIONAL - SEAT HEADREST ASSEMBLY AND INSTALLATION	001J-03
FUEL SYSTEM - FUSELAGE	001K-01
FUEL SYSTEM - OPTIONAL ELECTRIC FUEL PUMP	001K-03

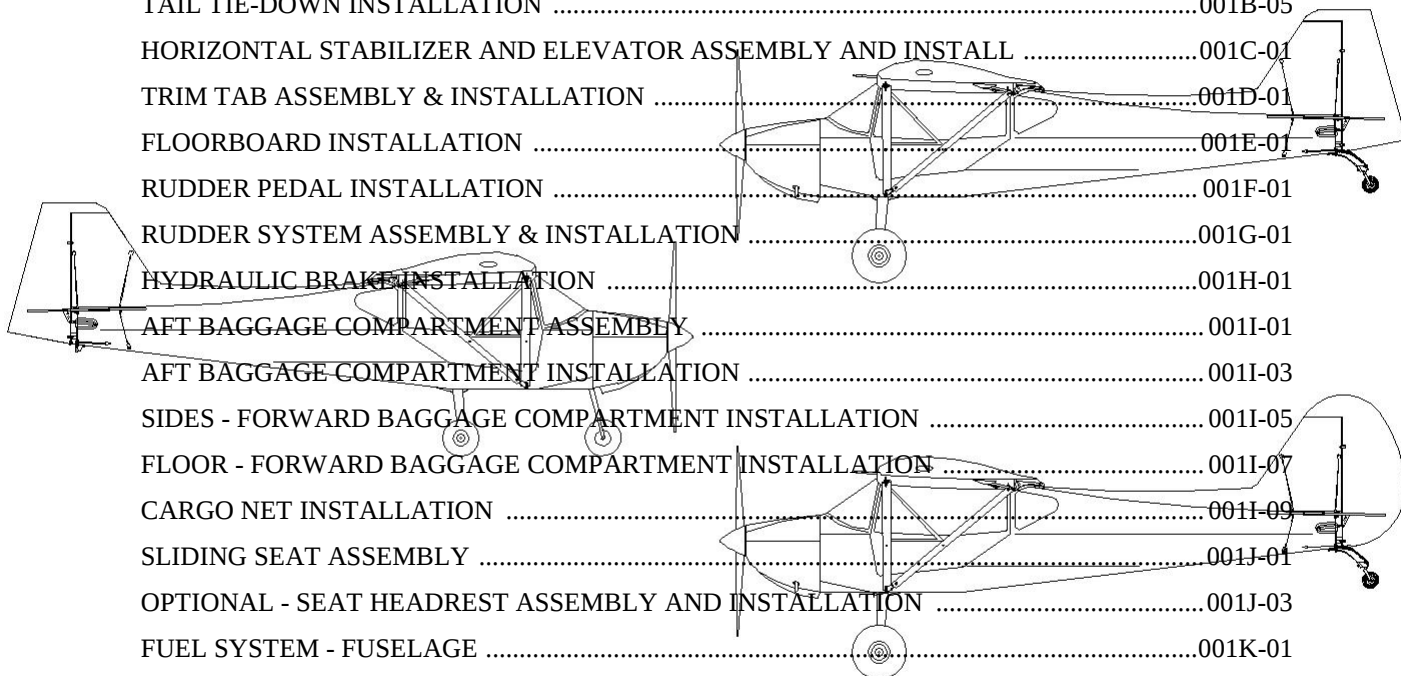 

002 - CONTROL SYSTEMS


CONTROL STICK ASSEMBLY & INSTALLATION	002-01
CONTROL STICK PUSH-PULL TUBE ASSEMBLY & INSTALLATION	002A-01
ELEVATOR PUSH-PULL TUBE ASSEMBLY & INSTALLATION	002B-01
AILERON CABLE SYSTEM INSTALLATION - FUSELAGE	002C-01
FLAP LEVER ASSEMBLY AND INSTALLATION	002D-01

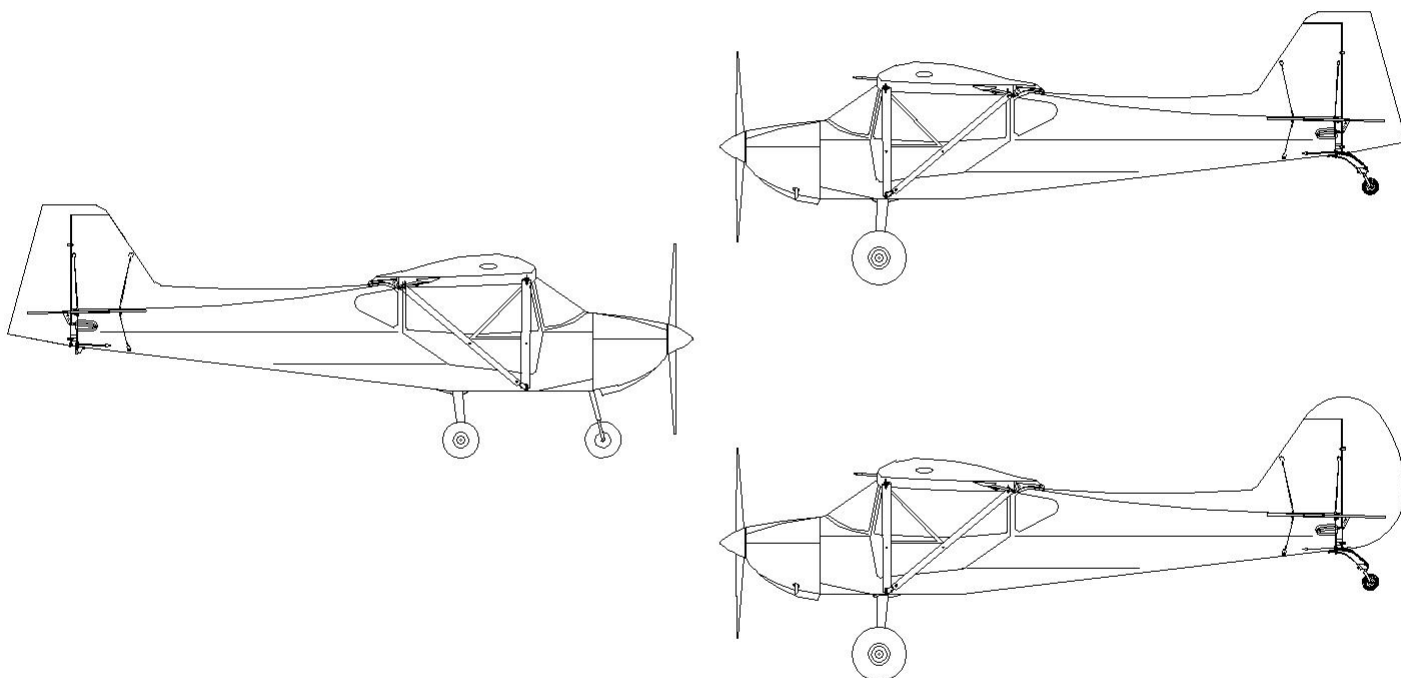 

003 - ENGINE


ROTAX 912ULS

ENGINE MOUNT INSTALLATION	003-01
ENGINE ACCESSORY INSTALLATION	003A-01
FUEL SYSTEM - FIREWALL FORWARD	003B-01
COOLING SYSTEM INSTALLATION	003C-01
RADIATOR DUCT INSTALLATION	003C-03
OPTIONAL HEATER INSTALLATION - RADIANT STYLE	003C-05
LUBRICATION SYSTEM ASSEMBLY & INSTALLATION	003D-01
MUFFLER ASSEMBLY	003E-01
OPTIONAL HEATER INSTALLATION - MUFFLER STYLE	003F-01
THROTTLE CONTROL ASSEMBLY	003G-01
CHOKE CONTROL ASSEMBLY	003H-01
BATTERY BOX ASSEMBLY & INSTALLATION	003I-01
ENGINE ELECTRICAL	003J-01
ANALOG INSTRUMENTS & ELECTRICAL - SAMPLE SCHEMATIC.....	003J-03
12" SPINNER ASSEMBLY	003K-01
COWLING ASSEMBLY & INSTALLATION	003L-01
WHIRL WIND PROP INSTALLATION	003M-01
WARP DRIVE PROP INSTALLATION	003M-03

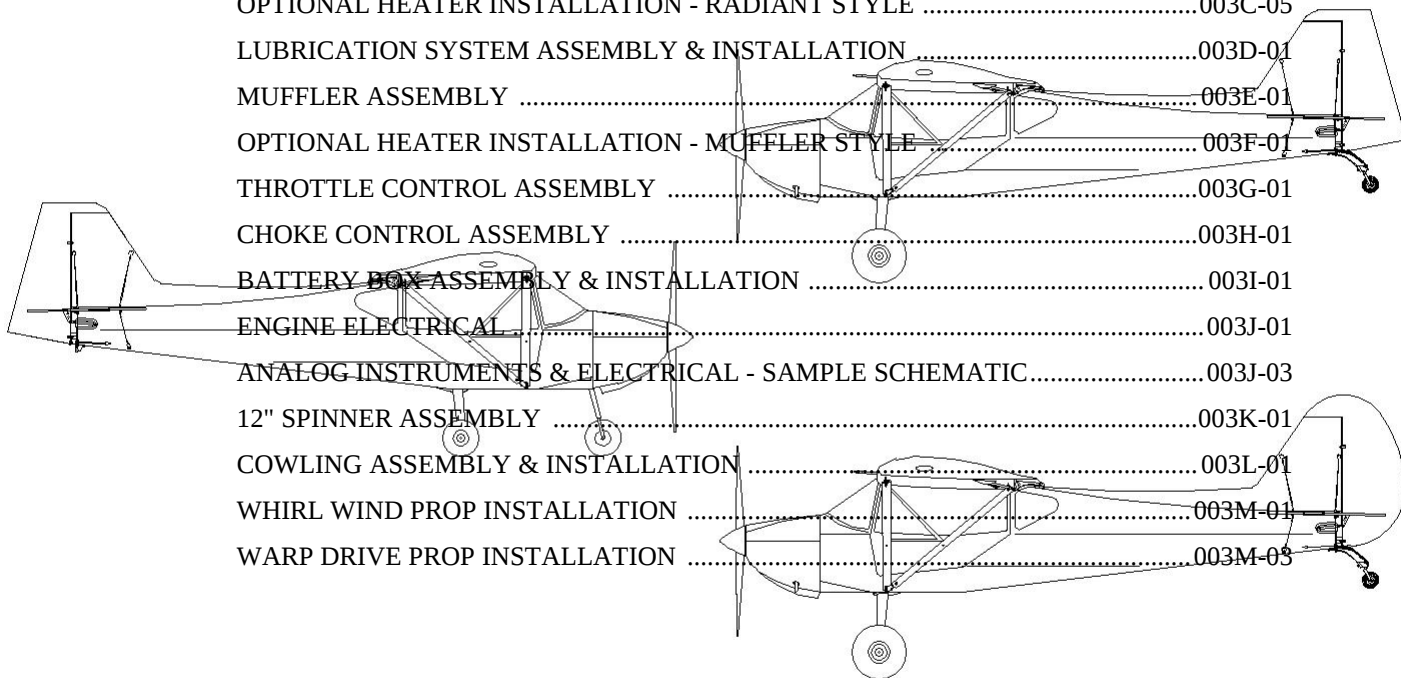 


004 - INSTRUMENTS - PITOT/STATIC

 PITOT/STATIC TO INSTRUMENTS INSTALLATION 004-01

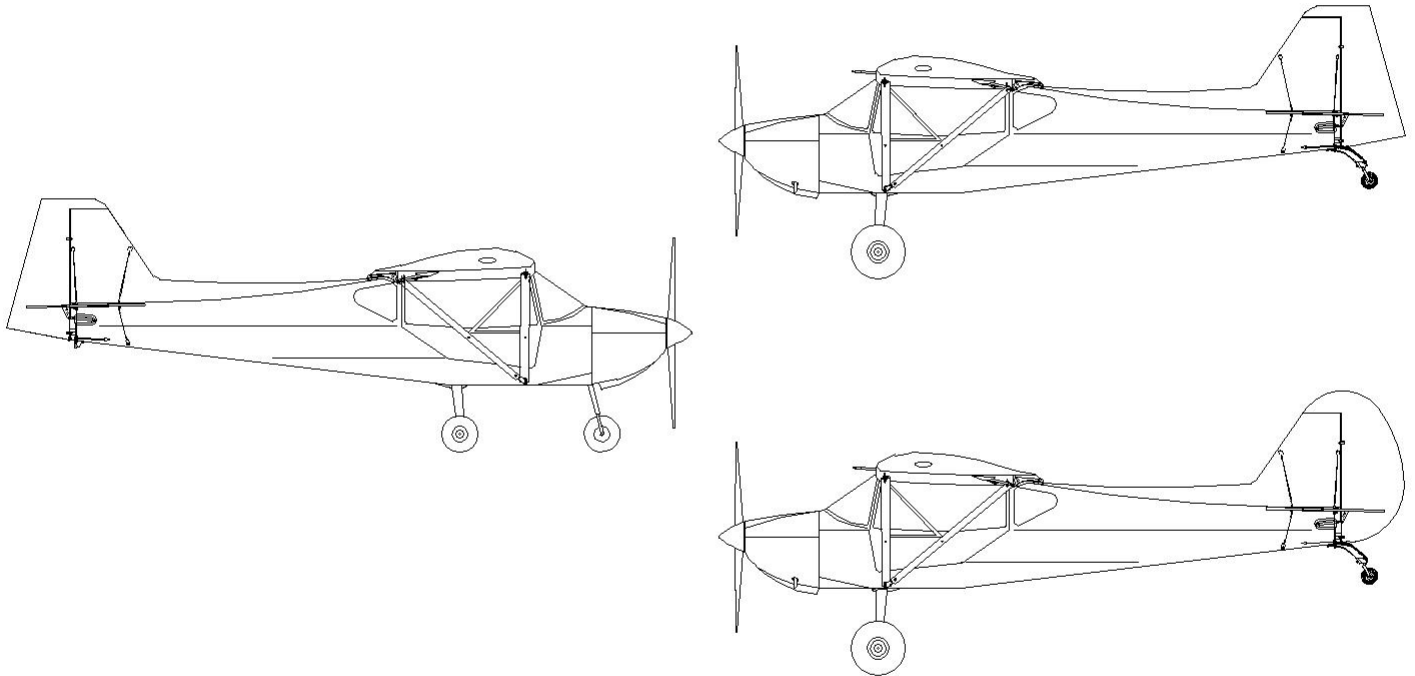


005 - WING

UNIVERSAL HINGE	005-01
MAIN STRUCTURE ASSEMBLY	005-03
FUEL TANK ASSEMBLY & INSTALLATION	005A-01
FUEL CAP ASSEMBLY	005A-03
AILERON BELLCRANK AND CABLE INSTALLATION	005B-01
ROOT RIB ASSEMBLY	005C-01
RIB ASSEMBLY	005C-03
TIP RIB ASSEMBLY	005C-05
RIB & SHEET METAL	005C-07
FLAP ASSEMBLY AND INSTALLATION	005D-01
AERO-SERVO AILERON ASSEMBLY AND INSTALLATION	005D-03
LIFT STRUT ASSEMBLY & INSTALLATION.....	005E-01
JURY STRUT INSTALLATION	005E-03
WING TIP ASSEMBLY AND INSTALLATION	005F-01
ROOT SKIN INSTALLATION.....	005G-01

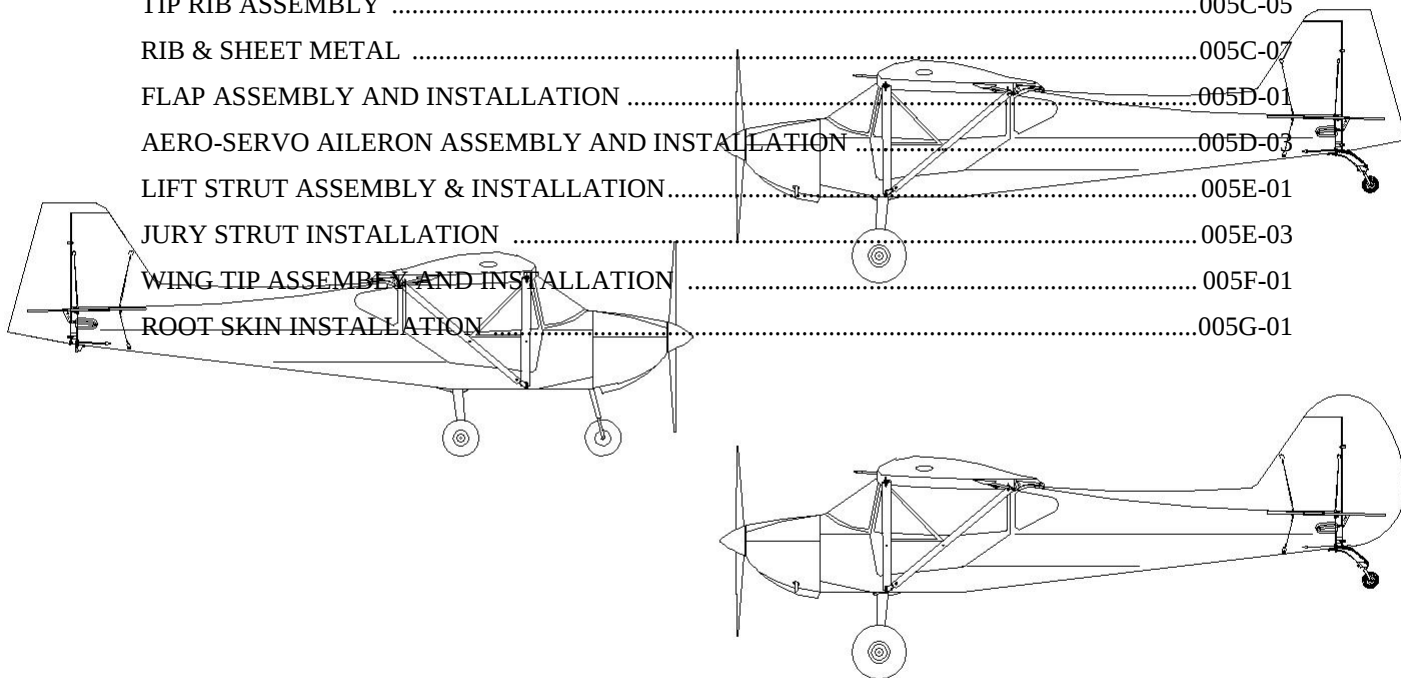 


006 - BOOT COWL & PANEL

BOOT COWL ASSEMBLY	006-01
VENT SYSTEM INSTALLATION	006-03
INSTRUMENT PANEL INSTALLATION	006A-01
INSTRUMENT SUB-PANEL & RADIO MOUNT PLATES INSTALLATION	006A-03

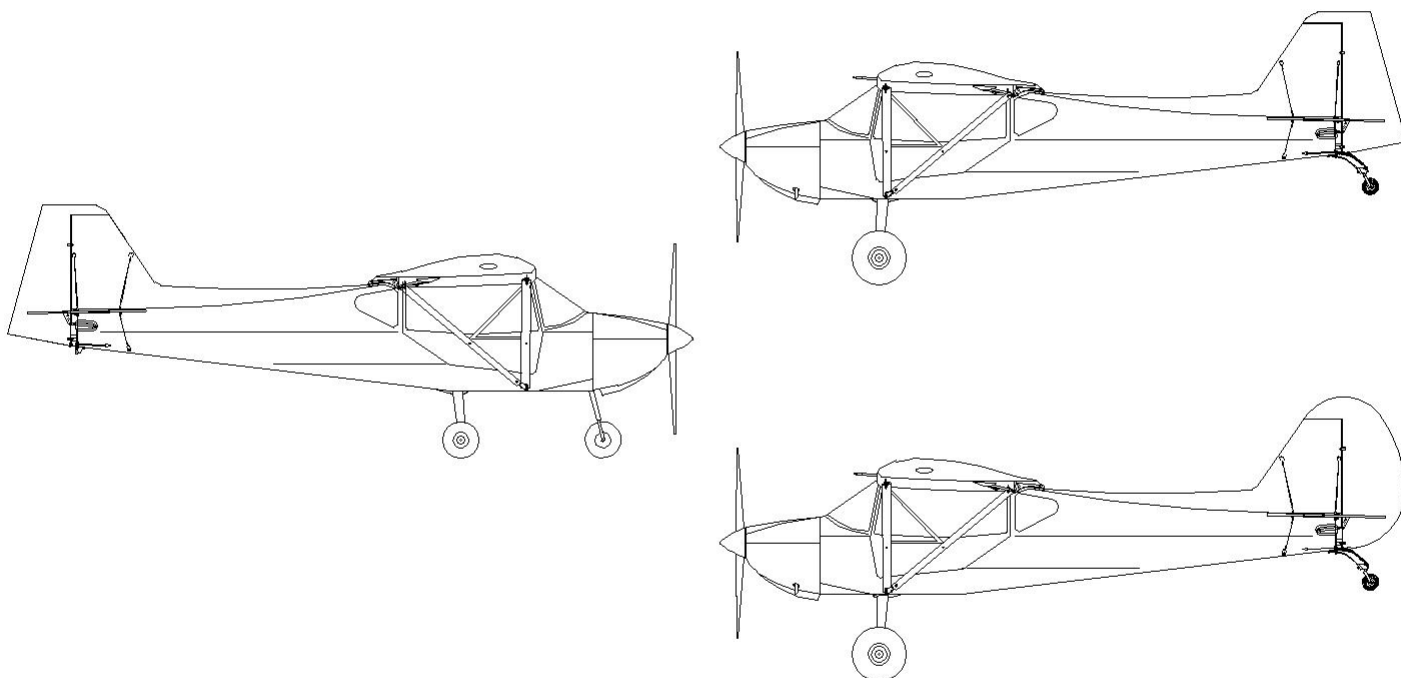 


007 - WINDSHIELD & DOORS

WINDSHIELD & SKYLIGHT INSTALLATION	007-01
DOOR ASSEMBLY - LEXAN AND TRIM	007A-01
DOOR LATCH AND DOOR ASSEMBLY	007A-03

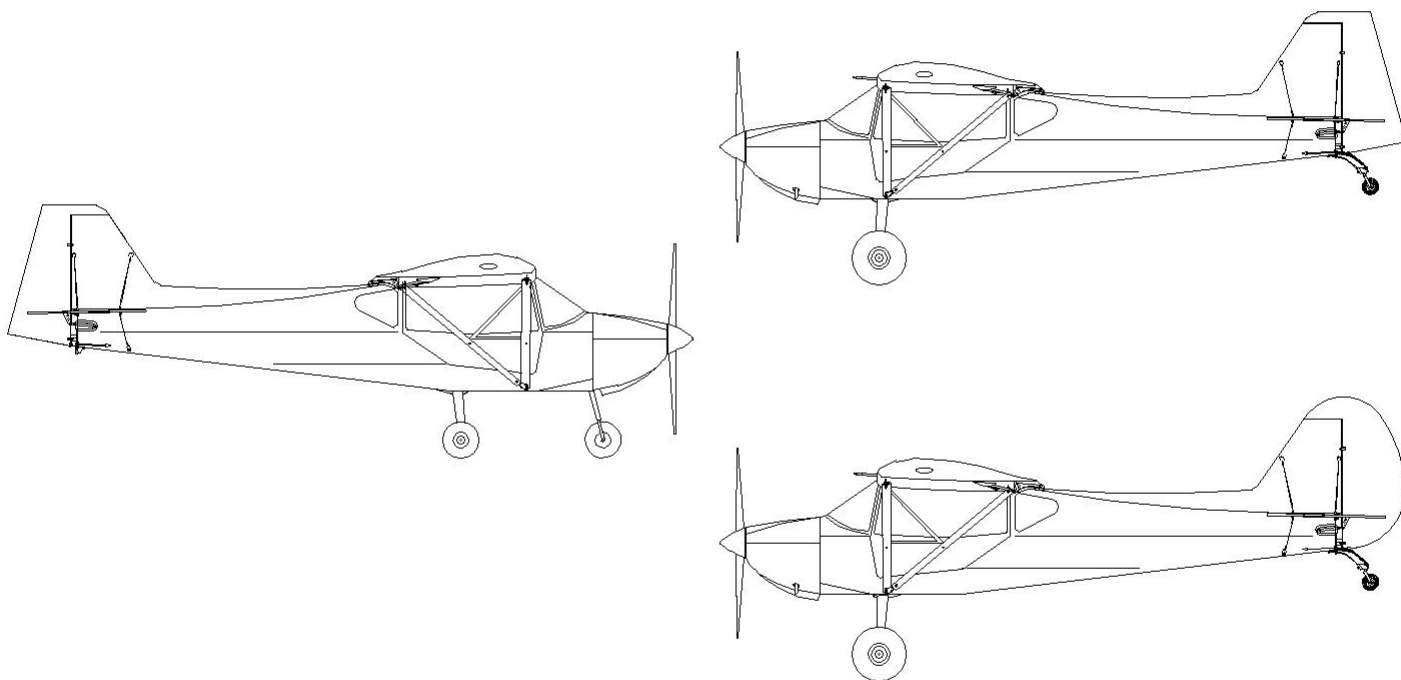 


008 - COVERING

COVERING SUPPLIES	008-01
-------------------------	--------

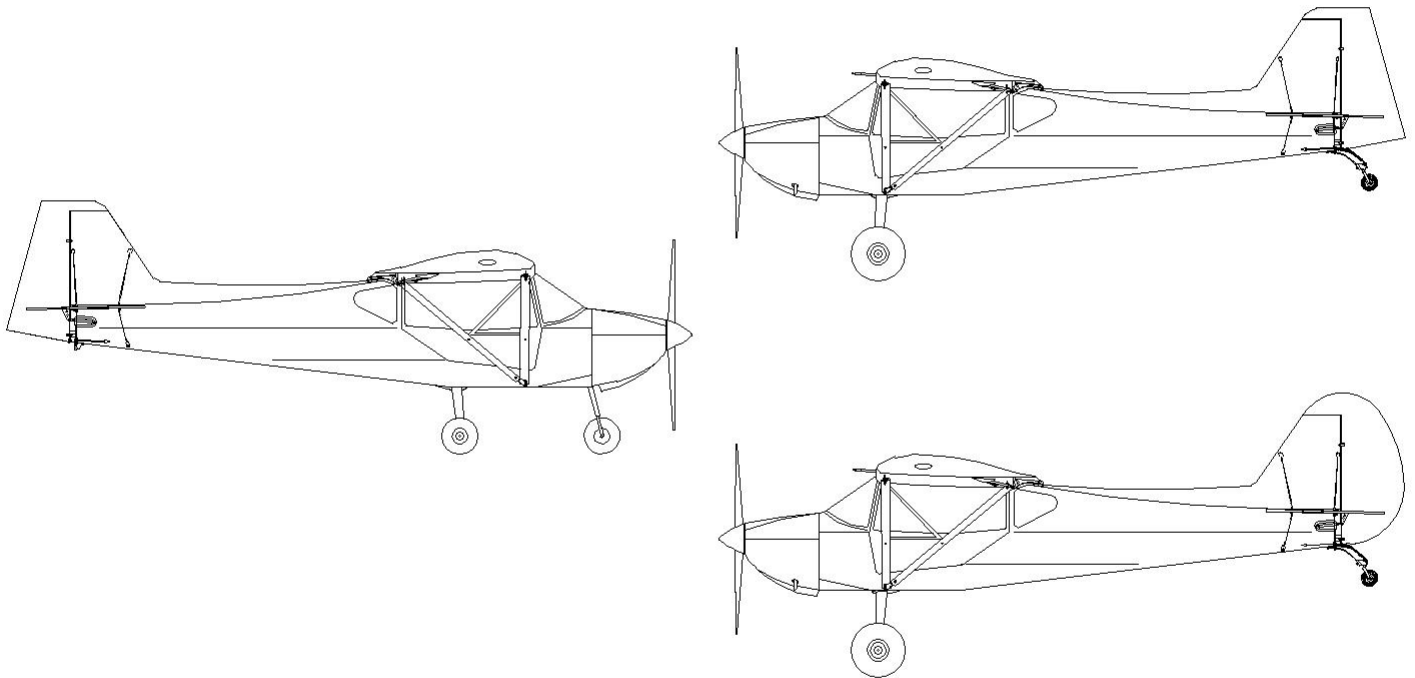 




009 - SEAT BELTS & INTERIOR

SEAT BELT INSTALLATION	009-01
INTERIOR INSTALLATION	009A-01

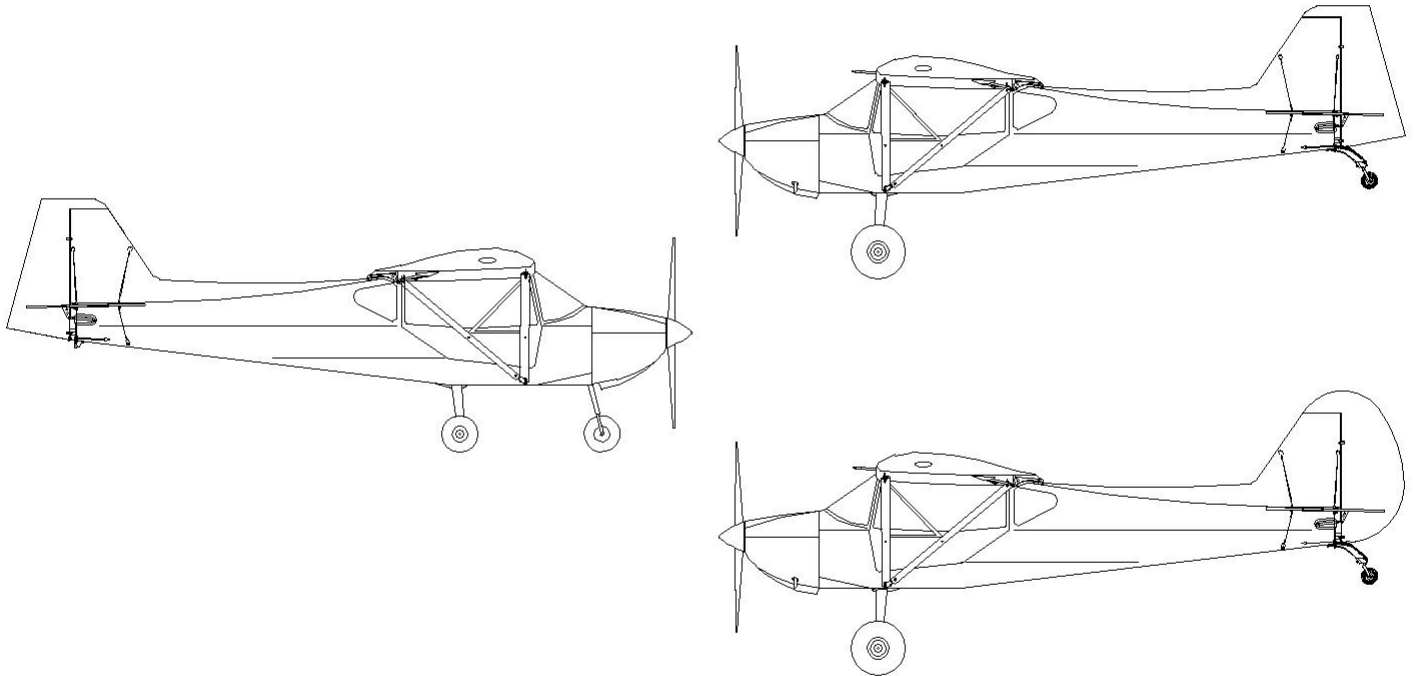 

010 - OPTIONS

AVEO STROBE INSTALLATION	010-01
LANDING LIGHT INSTALLATION	010A-01
PASSENGER SEAT ELECTRIC ELEVATOR TRIM	010B-01
TIE DOWN SHACKLE INSTALLATION	010C-01
COVER / PAINT STANDS - FUSELAGE	010D-01
COVER / PAINT STANDS - WING	010D-03
COVER / PAINT STANDS - FLAPS & AILERONS	010D-05
COVER / PAINT STANDS - HORIZONTAL STABILIZERS & ELEVATORS	010D-07
COVER / PAINT STANDS - RUDDER	010D-09
26" ALASKAN WHEELS	010E-01
10" TIRE OPTION	010F-01
10" TAILWHEEL	010G-01

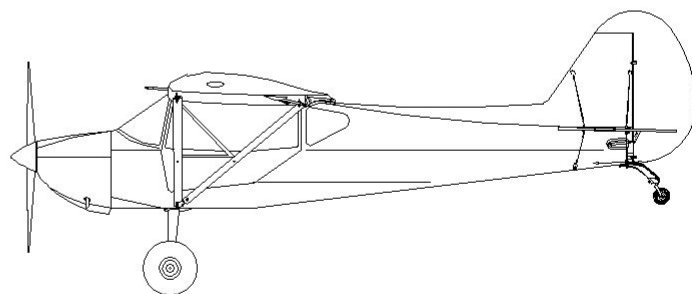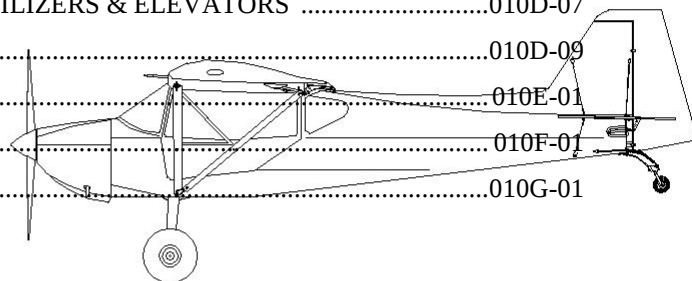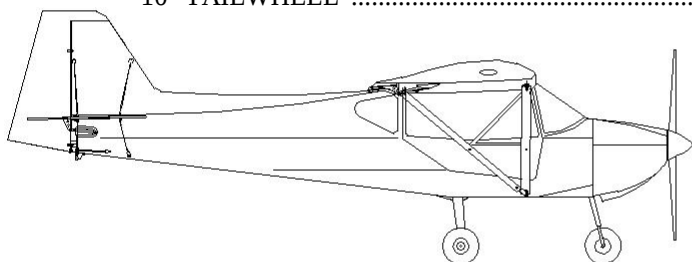   

FIGURES MANUAL INDEX

GENERAL00

FUSELAGE SYSTEMS.....01

CONTROL SYSTEMS02

ENGINE03

INSTRUMENTS - PITOT/STATIC04

WING05

BOOT COWL & PANEL06

WINDSHIELD & DOORS07


COVERING08

SEAT BELTS & INTERIOR09

OPTIONS10

RIGGING11

 WEIGHT & BALANCE12

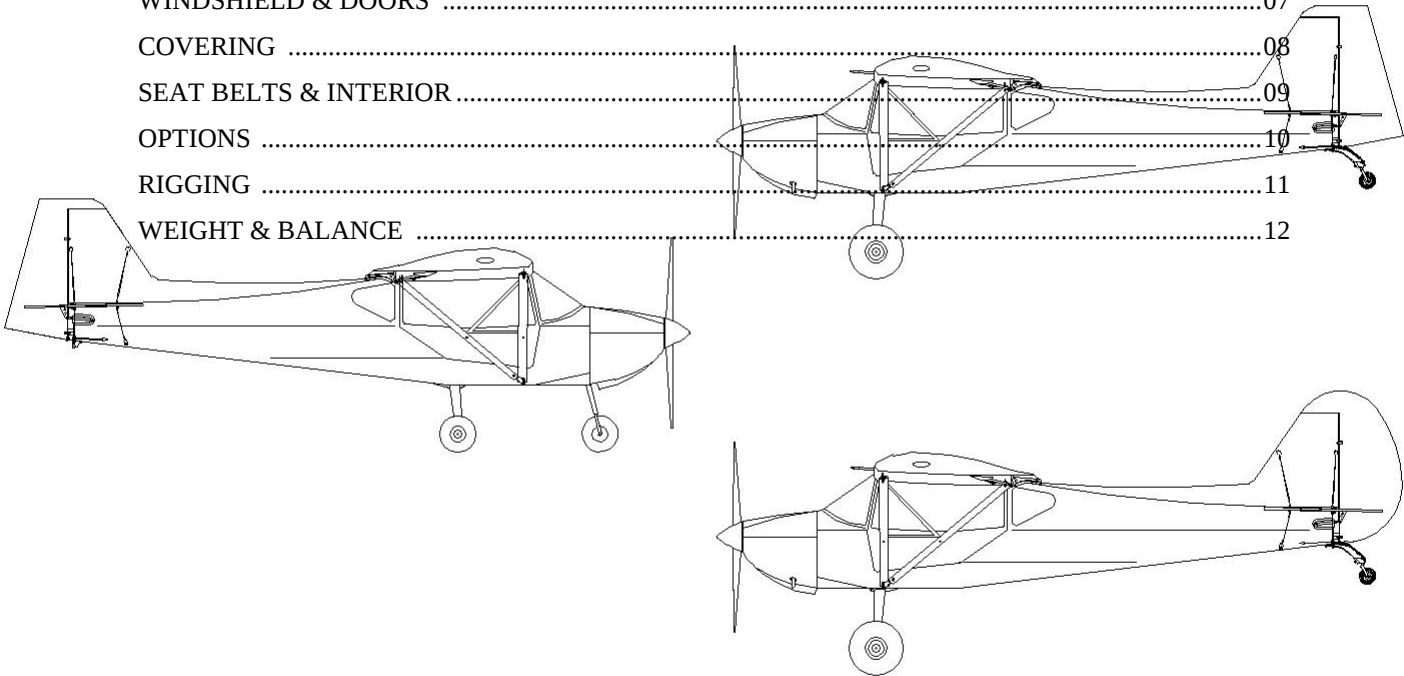


00 - GENERAL INFO

PARTS ORGANIZATION 00-01

PARTS INVENTORY "A" FRAME00-01A


FUSELAGE STATION IDENTIFICATION 00-02

 SERIAL NUMBER PLATE LOCATION 00-03

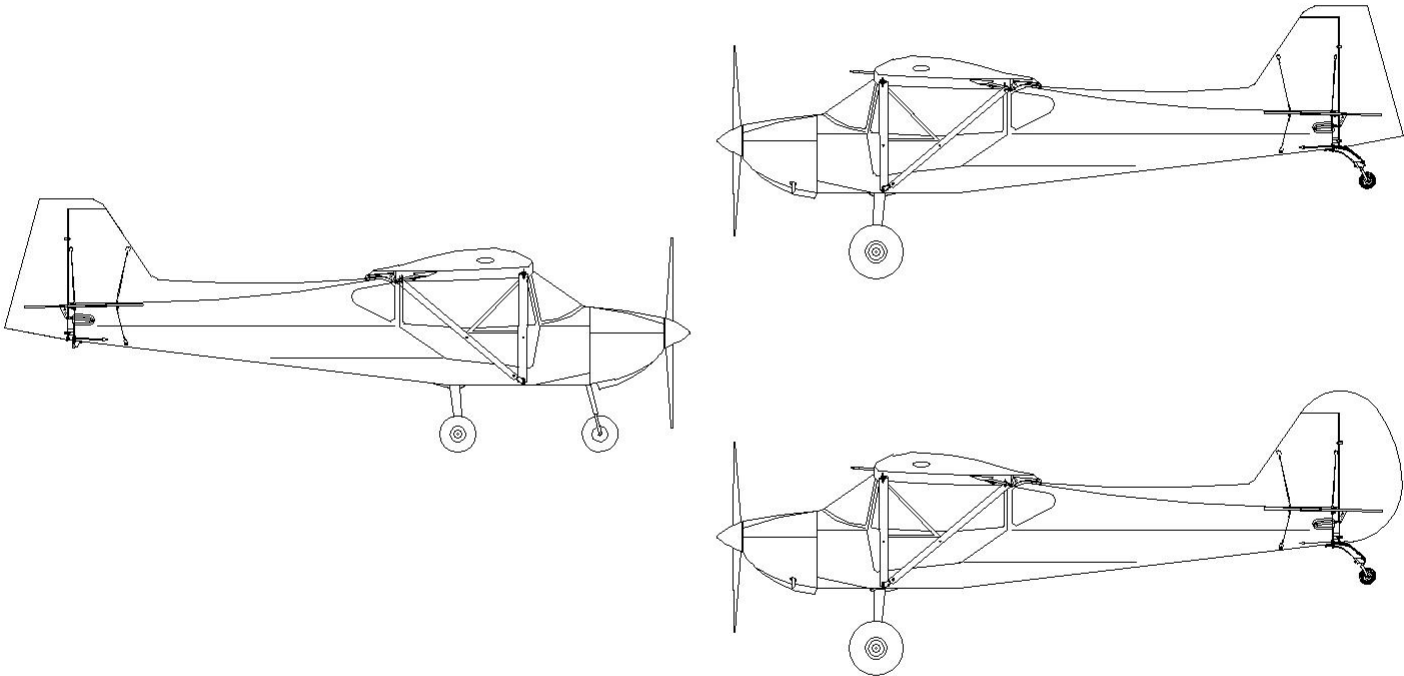


01 - FUSELAGE SYSTEMS

TOP FORMER MODIFICATION	01-01
TOP FORMER ATTACHMENT	01-04
SIDE FORMER ATTACHMENT	01-08
BELLY FORMER ATTACHMENT	01-15
VERTICAL STABILIZER RIB	01-19
MAIN LANDING GEAR LOCATIONS	01A-04
TOP MAIN GEAR CLAMP PLATE ORIENTATION	01A-05
TAIL SPRING INSTALLATION	01B-02
NOSE GEAR FORK DRILLING	01B-12
ELEVATOR HINGE ALIGNMENT	01C-05
HORIZONTAL STABILIZER RIBS	01C-09
MODIFIED TANGS FOR TAIL BRACE ROD ATTACH	01C-12
TANG LOCATIONS FOR TAIL BRACE RODS	01C-13
TAIL BRACE ROD MODIFICATION	01C-14
HORIZONTAL TAIL TO FUSELAGE ATTACH	01C-15
HORIZONTAL TAIL BRACING (TYPICAL)	01C-17
INSTALLATION OF TRIM EXIT FAIRING	01C-27
TRIM EXIT FAIRING - SERVO PUSH-ROD EXIT	01C-31
TRIM TAB AND RIBS	01D-04
TRIM TAB CENTER RIB AND HINGE LOCK	01D-08
TRIM TAB HORN INSTALLATION	01D-18
FLOORBOARD DRILL SCHEMATIC	01E-01
RUDDER PEDAL INSTALLATION	01F-02
RUDDER PEDAL INSTALLATION	01F-03
RUDDER HINGE ALIGNMENT	01G-01
INSTALL RUDDER CABLES FOR COVERING	01G-05
TRIKE - RUDDER CABLE TO RUDDER ATTACH	01G-11
TAILDRAGGER - RUDDER CABLE TO RUDDER ATTACH	01G-12
PARK BRAKE BACKING PLATE MODIFICATION	01H-02
FIREWALL MODIFICATION FOR HYDRAULIC BRAKE INSTALL	01H-03
BRAKE SYSTEM SCHEMATIC	01H-06
CONTROL CABLE INSTALLATION	01H-14
AFT BAGGAGE COMPARTMENT - STATION 4	01I-07



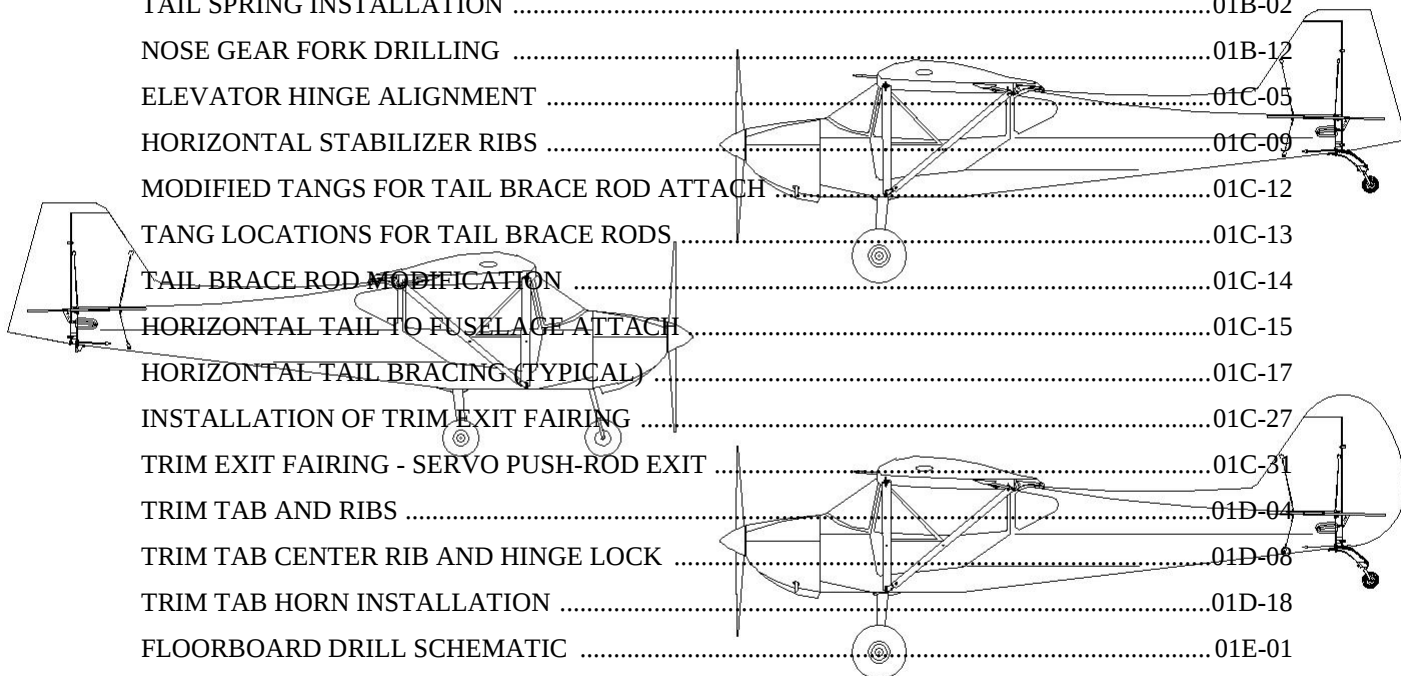 


AFT BAGGAGE COMPARTMENT - BOTTOM	01I-07A
FORWARD BAGGAGE COMPARTMENT - BOTTOM	01I-12
SLIDING SEAT BRACKET POSITIONING	01J-01
RIVET-NUT INSTALLATION	01J-02
SEAT BACK ORIENTATION	01J-04
SLIDING SEAT BOTTOM FRAME MODIFICATION.....	01J-05
SEAT BOTTOM PAN INSTALLATION	01J-06
MULTI-HOLE TANG MODIFICATION	01J-08
SLIDING SEAT RAIL LOCATION.....	01J-12
SEAT BACK PLATE DRILLING	01J-14
SEAT BACK COVERING DETAIL	01J-16
SEAT BOTTOM COVERING DETAIL	01J-16A
OPTIONAL HEADREST - DRILLING	01J-24
SEAT BACK FRAME DRILLING	01J-25
SEAT HEADREST TO SEAT BACK FRAME DRILLING	01J-26
RIVET-NUT INSTALLATION	01J-27
HEADER TANK MOUNT	01K-01
2.75 GALLON HEADER TANK MODIFICATION	01K-02
HEADER TANK FITTING INSTALLATION	01K-03
HEADER TANK MOUNT CHANNEL MODIFICATION	01K-08
FUEL VALVE MOUNTING	01J-09
OPTIONAL 6.9 GALLON HEADER TANK MOUNT	01K-22
OPTIONAL 6.9 GALLON HEADER TANK MODIFICATION.....	01K-23
OPTIONAL 6.9 GALLON HEADER TANK MOUNT CHANNEL LOCATION	01K-29
LOW FUEL WARNING SYSTEM WIRING	01K-34

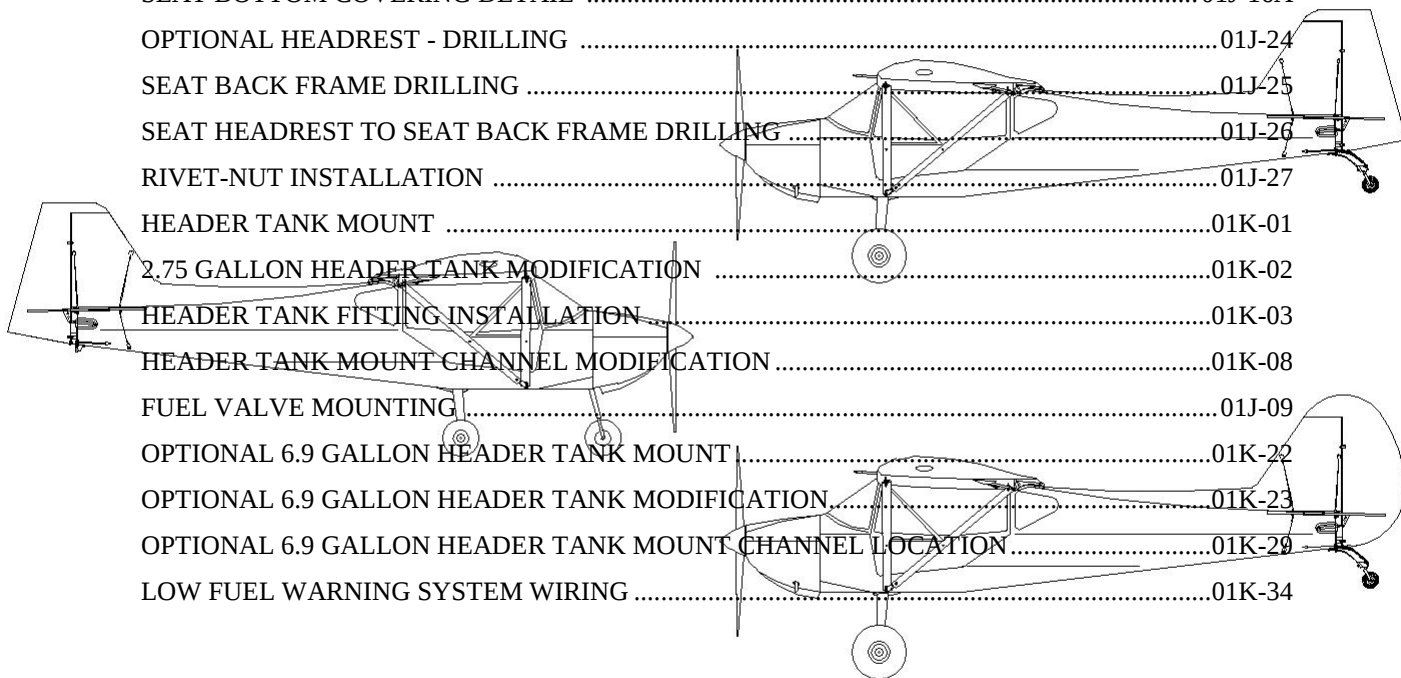 

02 - CONTROL SYSTEMS


CONTROL STICK MODIFICATION	02-02
CONTROL STICK LINK TUBE	02-05
ALUMINUM STOP SLEEVE FABRICATION	02A-02
SIDE PLATE INSTALLATION	02A-03
CABLE KEEPER MODIFICATION	02A-05
ELEVATOR YOKE ORIENTATION	02B-05
AILERON CONTROL SYSTEM OVERVIEW	02C-06
AILERON CONTROL SYSTEM - STATION 3	02C-07
FLAP LEVER PLASTIC SHIM MODIFICATION	02D-08
ANGLE BRACKET MODIFICATION	02D-09

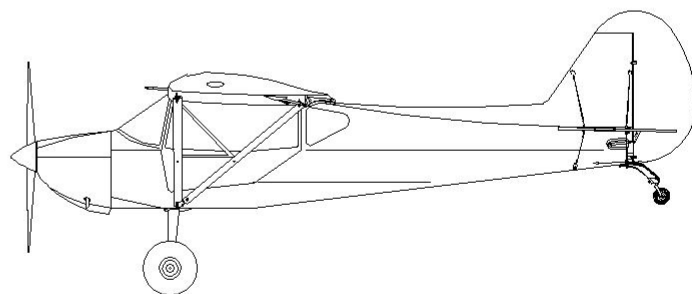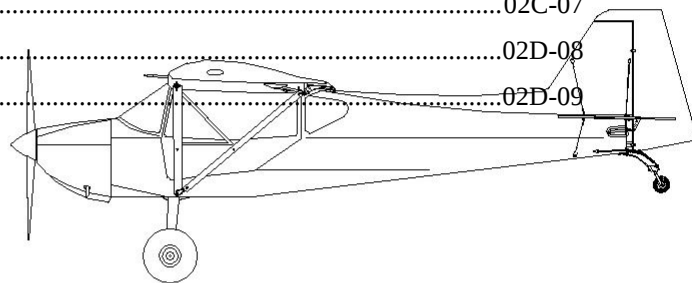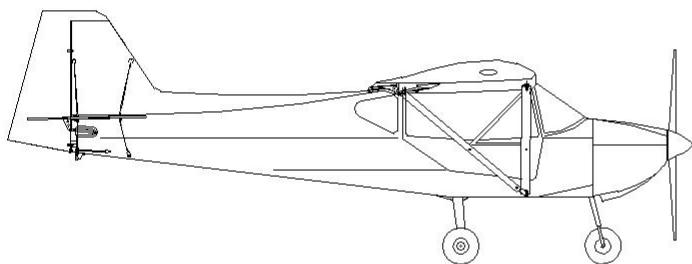   

03 - ENGINE


ROTAX 912ULS

FIREWALL MODIFICATION	03A-02
FIREWALL ELECTRICAL WIRE PASS-THRU	03A-03
OIL TANK BREATHER TUBE	03A-05
RADIATOR CUSHION CLAMP MOUNTING	03C-05
HEATER CORE ASSEMBLY	03C-19
OIL COOLER INSTALLATION	03D-04
OIL COOLER INSTALLATION	03D-06
MUFFLER ISOLATOR	03E-02
MUFFLER ISOLATOR SAFETY WIRE	03E-03
MUFFLER EXTENSION	03E-09
CHOKE CABLE INSTALLATION	03H-07
HOUR METER RELAY	03J-05
3-BLADE WHIRL WIND PROP - 12" SPINNER TEMPLATE	03K-04
3-BLADE WARP DRIVE PROP - 12" SPINNER TEMPLATE	03K-04A
SPINNER DRILLING	03K-07
SPINNER ALIGNMENT MARKS	03K-10
SPINNER NUT PLATE INSTALLATION	03K-11
COWLING TO SPINNER SPACING	03L-02
BOTTOM COWLING MODIFICATION	03L-03
COWLING FASTENER LOCATION	03L-12
OIL TANK ACCESS OPENING	03L-20
1/4 TURN FASTENER INSTALLATION	03L-28
AIR EXIT MODIFICATION	03L-31
FLANGE BUSHING INSTALLATION	03M-02
PROPELLER TRACKING	03M-06

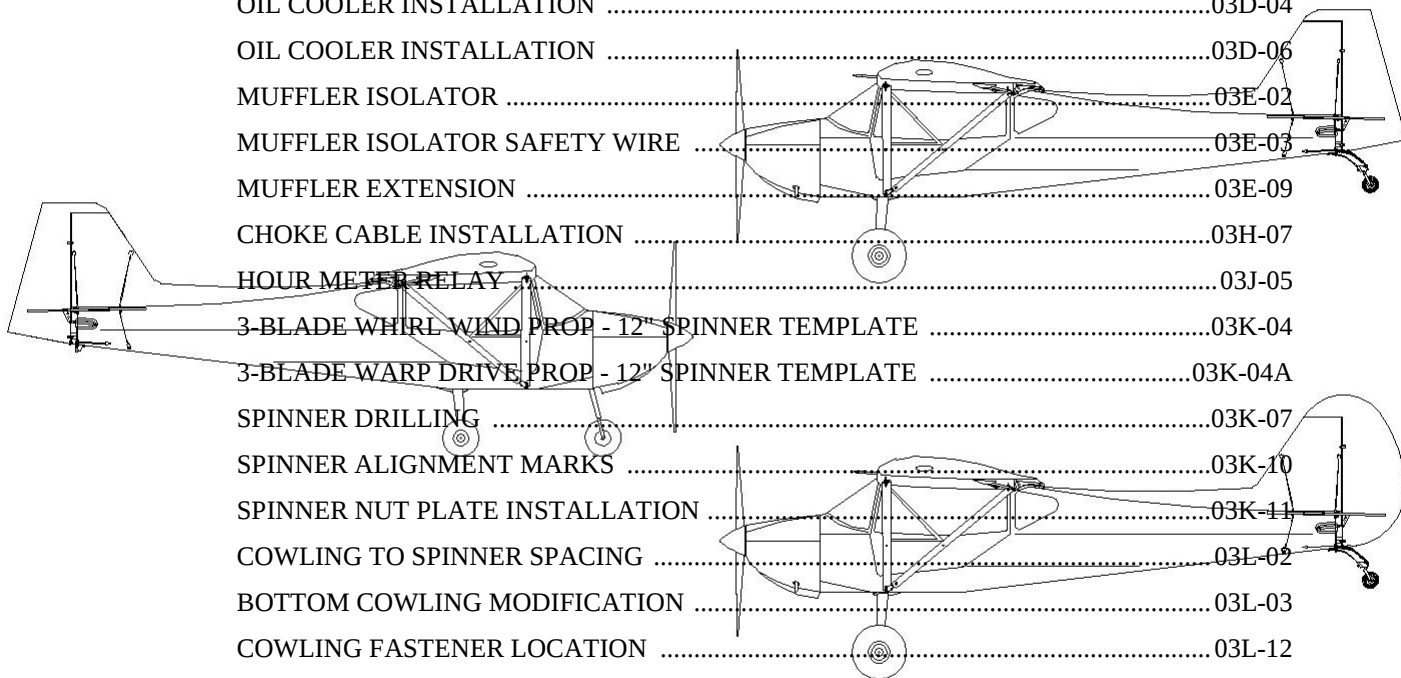 


04 - INSTRUMENTS - PITOT/STATIC

 NO FIGURE DRAWINGS

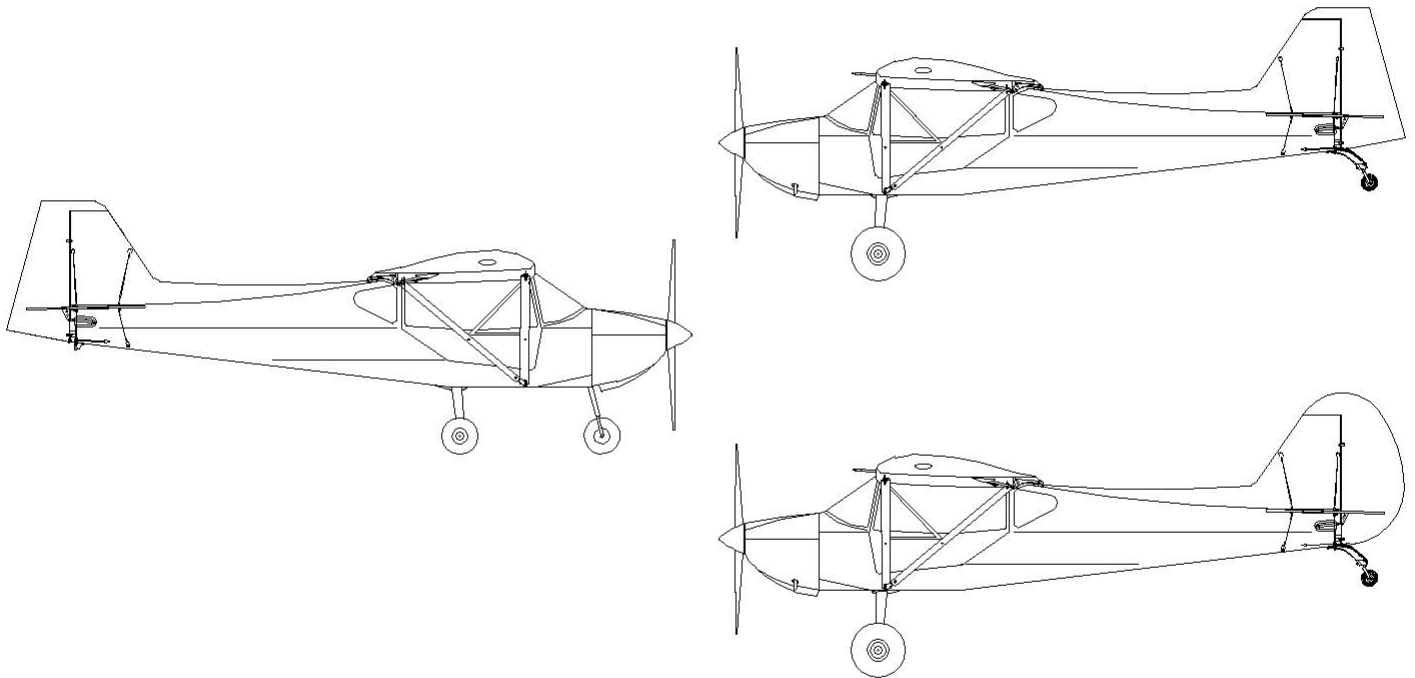


05 - WING

WING SPAR ORIENTATION	05-02
WING SPAR ORIENTATION	05-02A
WING SPAR ORIENTATION	05-03
LEADING EDGE SPAR ROOT DOUBLER & PATCH INSTALLATION	05-05
LEADING EDGE SPAR DOUBLER INSTALLATION	05-14
STRUT ATTACH PLATE INSTALLATION	05-18
WING FRAME ASSEMBLY DETAILS	05-26
RUB BLOCK & RETENTION PLATE	05-26A
BELLCRANK BRACE INSTALLATION	05-27
TIP BOW ORIENTATION	05-34
WING FUEL TANK ASSEMBLY	05A-02
FUEL TANK FITTING INSTALLATION	05A-03
WING TANK SUPPORT TUBE INSTALLATION	05A-07
FUEL TANK RETAINER ANGLE INSTALLATION	05A-10
RETAINER MODIFICATION	05A-14
BELLCRANK - UPPER ARM ASSEMBLY	05B-02
BELLCRANK - LOWER ARM ASSEMBLY	05B-02A
WING BELLCRANK ASSEMBLY AND INSTALLATION	05B-04
AILERON CABLE INSTALLATION - WING	05B-09
RIB LOCATIONS	05C-01
ROOT RIB - FWD RIB ATTACH CLIP MODIFICATION	05C-06
ROOT RIB - AFT RIB ATTACH CLIP MODIFICATION	05C-07
ROOT RIB MODIFICATION	05C-09
RIB #8 MODIFICATION	05C-09A
TIP RIB MODIFICATION	05C-09B
TIP RIB CLIP LOCATION	05C-11
TIP RIB STRINGER MODIFICATION	05C-18
UPPER ROOT SKIN MODIFICATION	05C-22
LOWER ROOT SKIN MODIFICATION	05C-23
TOP ROOT SKIN INSTALLATION	05C-30
CAPTURE RING MODIFICATION	05C-36
FUEL CAP HOLE PLACEMENT	05C-37
COVER RING MODIFICATION	05C-41

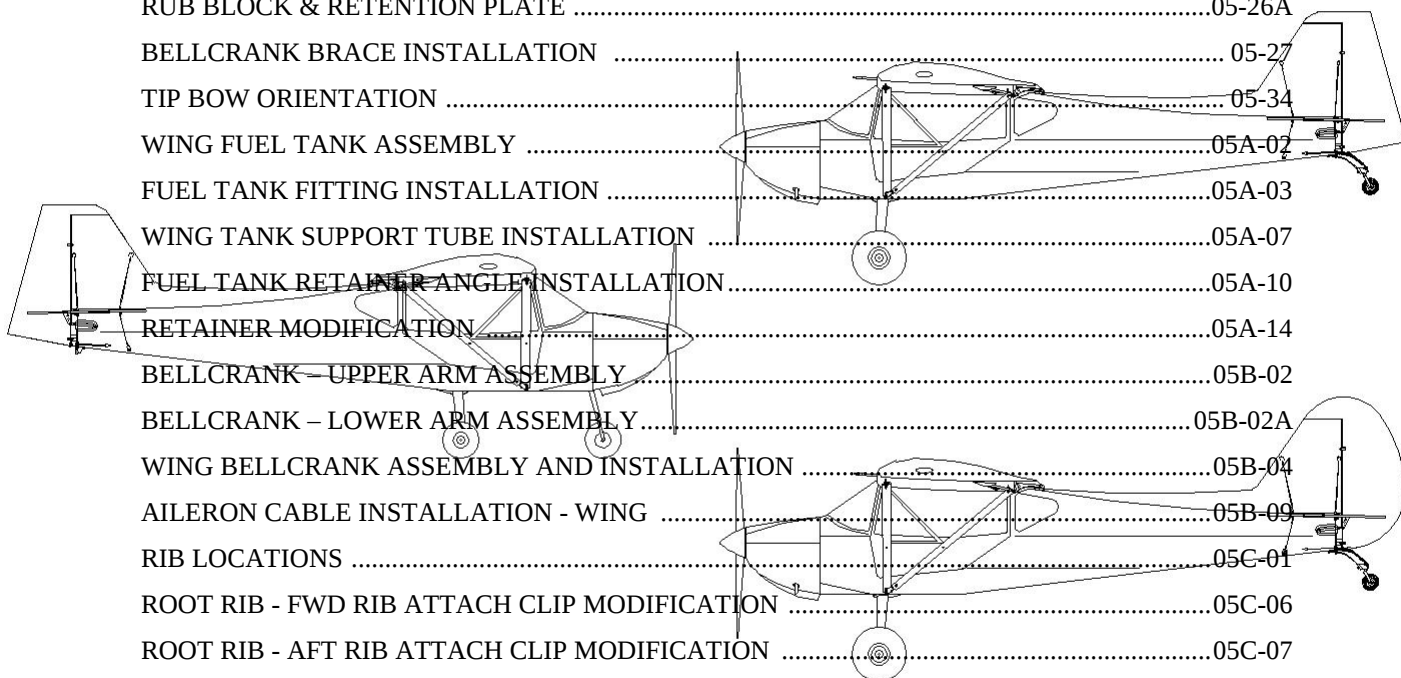 


FUEL SCUPPER ORIENTATION	05C-41A
LEADING EDGE TIP WRAP INSTALLATION	05C-47
LEADING EDGE WRAP MODIFICATION	05C-53
LEADING EDGE & UPPER ROOT WRAP BOND AREA	05C-55
LEADING EDGE WRAP CLAMPING	05C-56
LEADING EDGE WRAP FILLET	05C-58
PITOT/STATIC PROBE ASSEMBLY.....	05C-60
PITOT AND STATIC SYSTEM - WING	05C-62
FLAP TELEFLEX CABLE INSTALLATION - WING	05C-68
AILERON AND FLAP ATTACH ANGLE (TRAILING EDGE)	05D-05
FLAP HORN ATTACH ANGLE INSTALLATION	05D-08
FLAP HINGE ORIENTATION	05D-09
GAP SEAL INSTALLATION	05D-13
EXIT FAIRING MODIFICATION	05D-19
LIFT STRUT ORIENTATION	05E-01
LIFT STRUT SHIMS	05E-03
LIFT STRUT GUSSET PLATES	05E-04
UPPER AFT LIFT STRUT CONNECTOR MODIFICATION	05E-13
CONTROL SURFACE CLEARANCE - WING	05F-04
ROOT CLOSEOUT DETAIL	05G-03
FUEL SIGHT GAUGE DECAL INSTALLATION	05G-04
FUEL SIGHT GAUGE INSTALLATION	05G-05
WING ATTACHMENT (T-BONE) MODIFICATION	05H-07
WING ATTACHMENT (T-BONE) MODIFICATION	05H-08
AFT JURY STRUT MODIFICATION.....	05H-18
WING ROOT BOTTOM GAP SEAL ATTACHMENT	05H-30

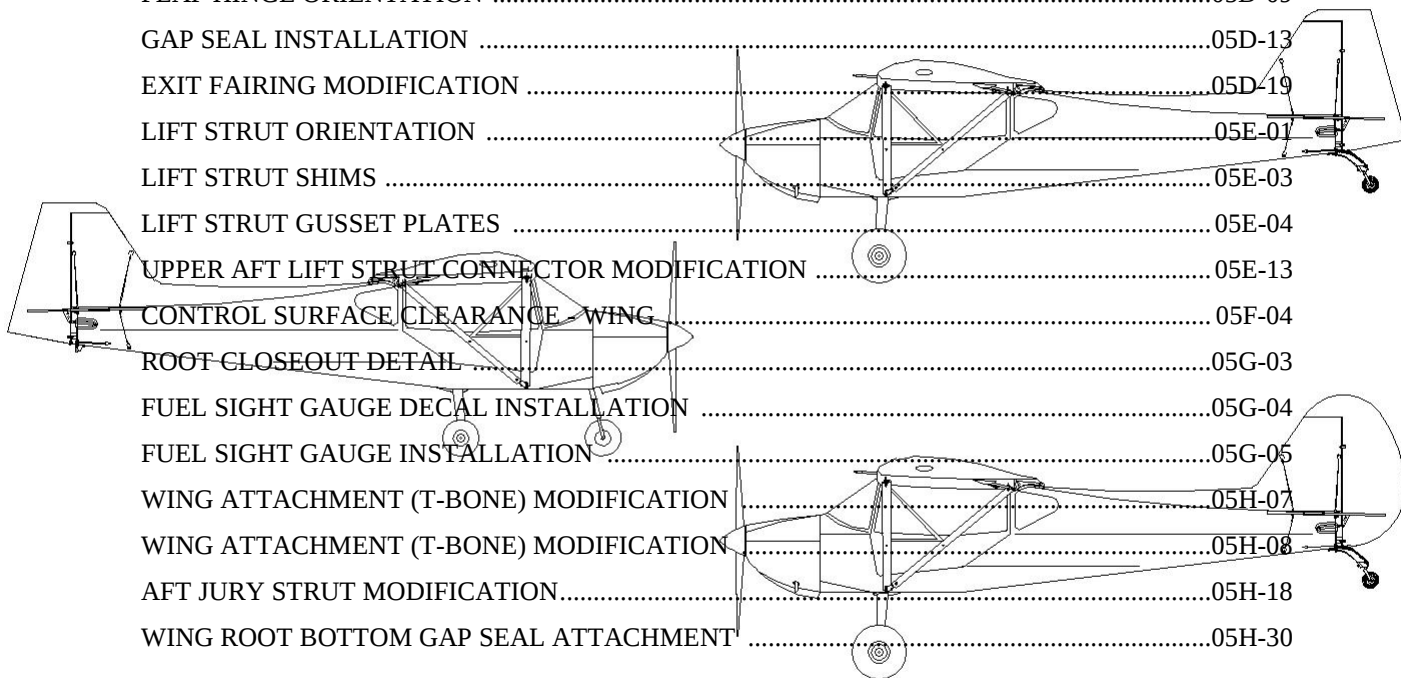 


06 - BOOT COWL & PANEL

BOOT COWL STIFFENER LOCATION	06-07
BOOT COWL STIFFENER TRIMMING	06-08
SIDE BOOT COWL INSTALLATION	06-11
SIDE BOOT COWL STIFFENER LOCATION	06-13
INSTRUMENT PANEL INSTALLATION - BOOT COWL	06-18
TAB ALIGNMENT	06-19
BOOT COWL STRIP TRIMMING	06-29
VENT SYSTEM - INSTRUMENT PANEL MODIFICATION	06-38
SAMPLE INSTRUMENT PANEL LAYOUT	06A-01
CONTROL CABLE - INSTRUMENT PANEL	06A-02
INSTRUMENT PANEL CLOSEOUT MODIFICATION	06A-08

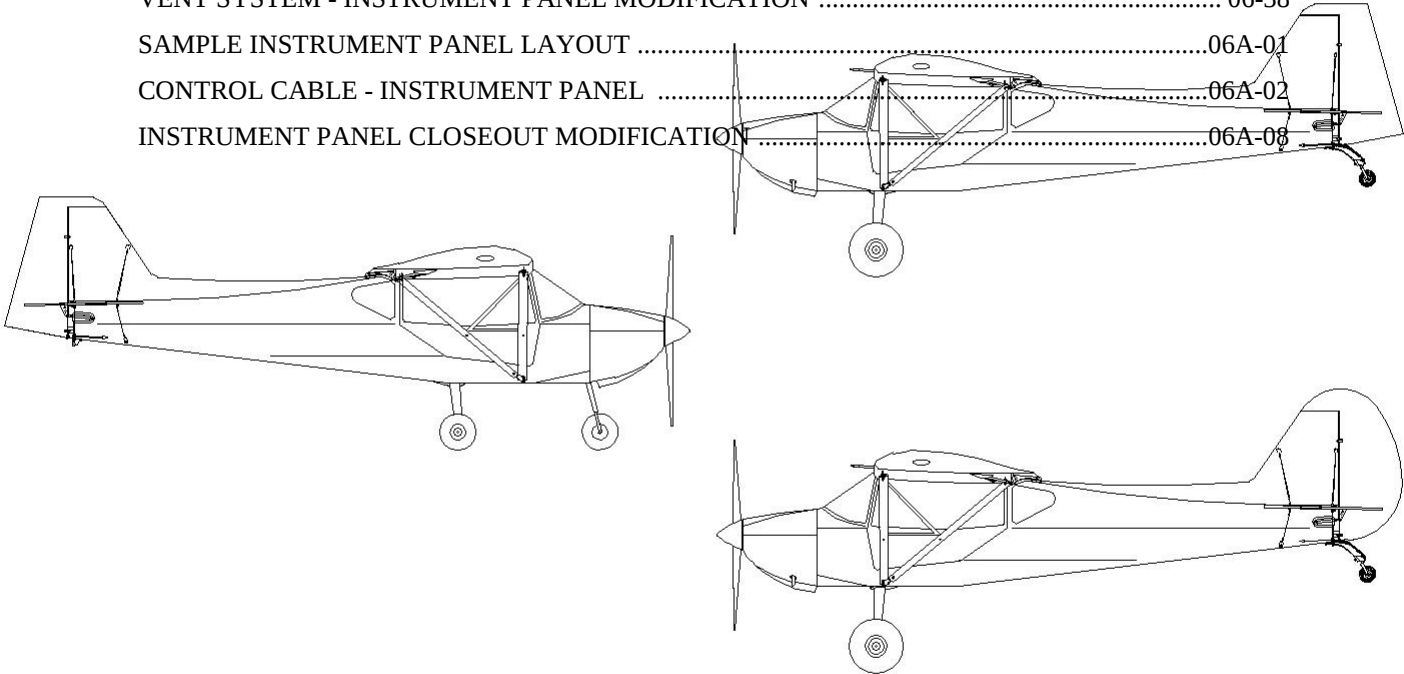 


07 - WINDSHIELD & DOORS

WINDSHIELD MOUNTING TAB MODIFICATION	07-02
WINDSHIELD LOCATION	07-03
WINDSHIELD HOLD DOWN STRIP MODIFICATION	07-05
WINDSHIELD HOLD DOWN STRIP DRILLING	07-06
WINDSHIELD ATTACH MODIFICATION	07-07
WINDSHIELD TRIMMING	07-08
RIB HEIGHT ADJUSTMENT - FUSELAGE	07-11
MATING STRIP MODIFICATION	07-20
SKYLIGHT TRIM STRIP MODIFICATION	07-25
WINDSHIELD - TOP DETAIL	07-32
FLAP FILLET MODIFICATION	07-33
WING CUFF INSTALLATION	07-39
DOOR FRAME CHECK	07A-01
UPPER TRIM STRIP MODIFICATION	07A-03
DOOR TRIM ASSEMBLY	07A-04
LOWER DOOR LEXAN TRIMMING	07A-13
UPPER DOOR LEXAN TRIMMING	07A-14
DOOR RIVETING	07A-17
CHANNEL EXTRUSION MODIFICATION	07A-18
ALUMINUM BUSHING - DOOR	07A-25
DOOR HANDLE DETAIL	07A-33

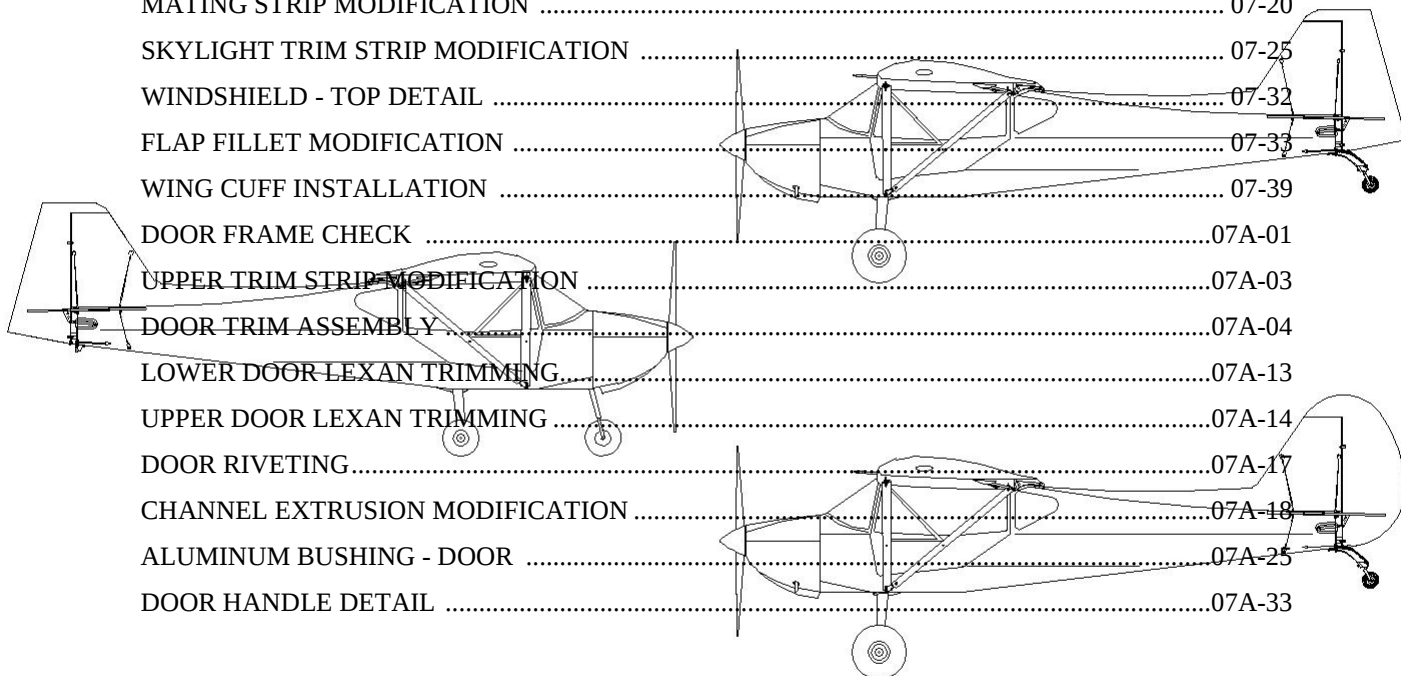 


08 - COVERING

WING COVERING - ANTI-CHAFE TAPE	08A-04
WING COVERING - FABRIC OVERLAP ON TIP AND ROOT	08A-17
WING COVERING - FABRIC OVERLAP ON LEADING & TRAILING EDGE SPAR	08A-17A
WING COVERING RIVETING	08A-26
FABRIC RIVETING	08A-26A
FABRIC RIVETING	08A-26B
FABRIC RIVETING	08A-26C
WING BOTTOM COVERING	08A-33
AILERON HINGE EXIT RING PLACEMENT	08A-33A
AILERON HINGE EXIT RING MODIFICATION	08A-33B
WING TOP COVERING	08A-37
ANTI-CHAFE TAPE APPLICATION FOR AILERONS AND FLAPS	08B-03
AILERON AND FLAP COVERING	08B-05
AILERON HINGE COVER AND RING MODIFICATION	08B-12
AILERON COVERING	08B-13
FLAP COVERING	08B-14
FUSELAGE COVERING DETAILS	08C-07
AFT EXIT TEMPLATE #1	08C-30
AFT EXIT TEMPLATE #2	08C-30A
AFT EXIT TEMPLATE #3	08C-30B
AFT EXIT TEMPLATE #4	08C-30C
VERTICAL STABILIZER AND REAR FUSELAGE COVERING	08C-33
FUSELAGE SIDE COVERING	08C-33A
FUSELAGE BOTTOM COVERING	08C-33B
FUSELAGE TOP COVERING	08C-34
FABRIC OVERLAP TYPICAL FOR TAIL SURFACES	08D-06
HORIZONTAL STABILIZER COVERING	08D-17
RUDDER - FABRIC REINFORCEMENT	08E-11
RUDDER COVERING - RANS RUDDER	08E-12
RUDDER COVERING - OPTIONAL CLASSIC RUDDER	08E-12A
RUDDER AND ELEVATOR STITCHING	08E-12B
ELEVATOR COVERING	08F-14

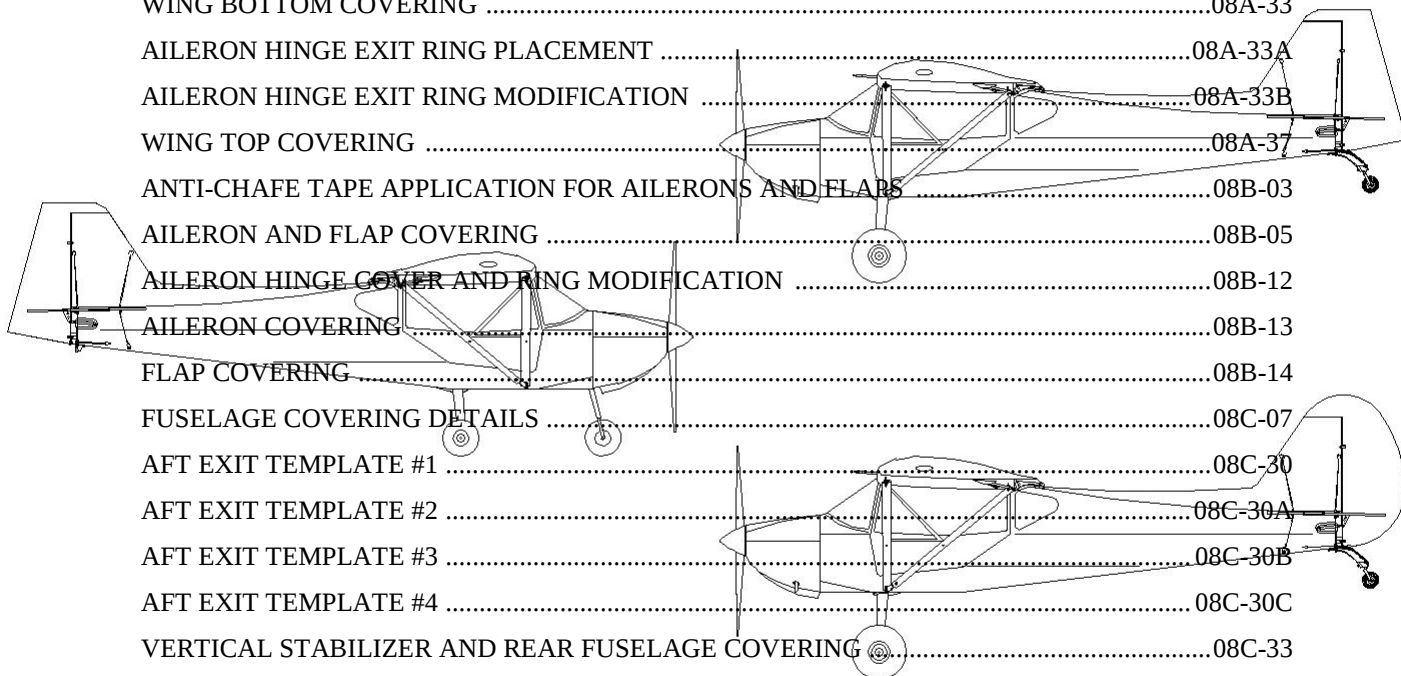 


09 - SEAT BELTS & INTERIOR

 NO FIGURE DRAWINGS

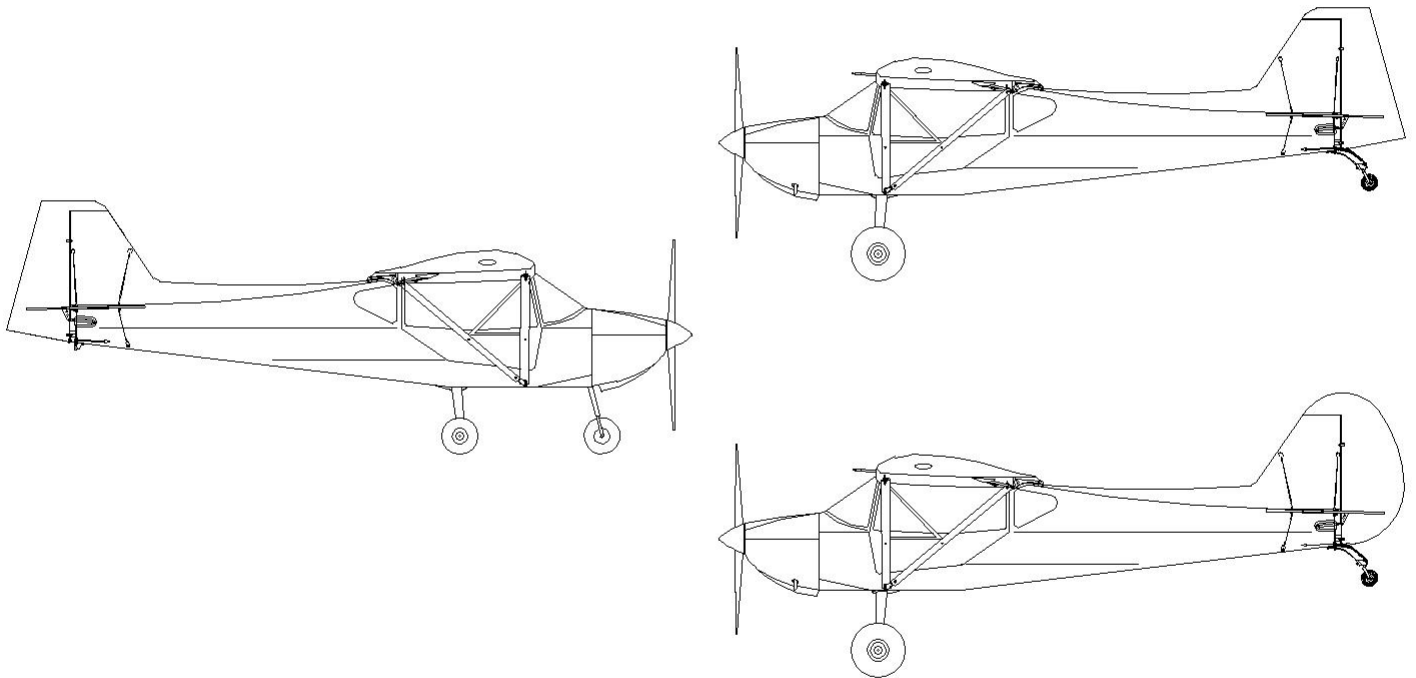


10 - OPTIONS

A-FRAME STAND	KP-100
FORWARD FUSELAGE ATTACH	KP-101
WING ROOT ATTACH	KP-103
"T" LOCK HANDLE	KP-107
PAINT STAND	KP-108
PAINT STAND	KP-109
PAINT STAND AFT ATTACH FUSELAGE	KP-112
WING TIP PIVOT	KP-117
PAINT STAND - AILERON ATTACH	KP-118
ELEVATOR ROOT ATTACH	KP-119
ELEVATOR OUTER ATTACH	KP-120
UPPER RUDDER SUPPORT TUBE	KP-121
LOWER RUDDER SUPPORT	KP-122

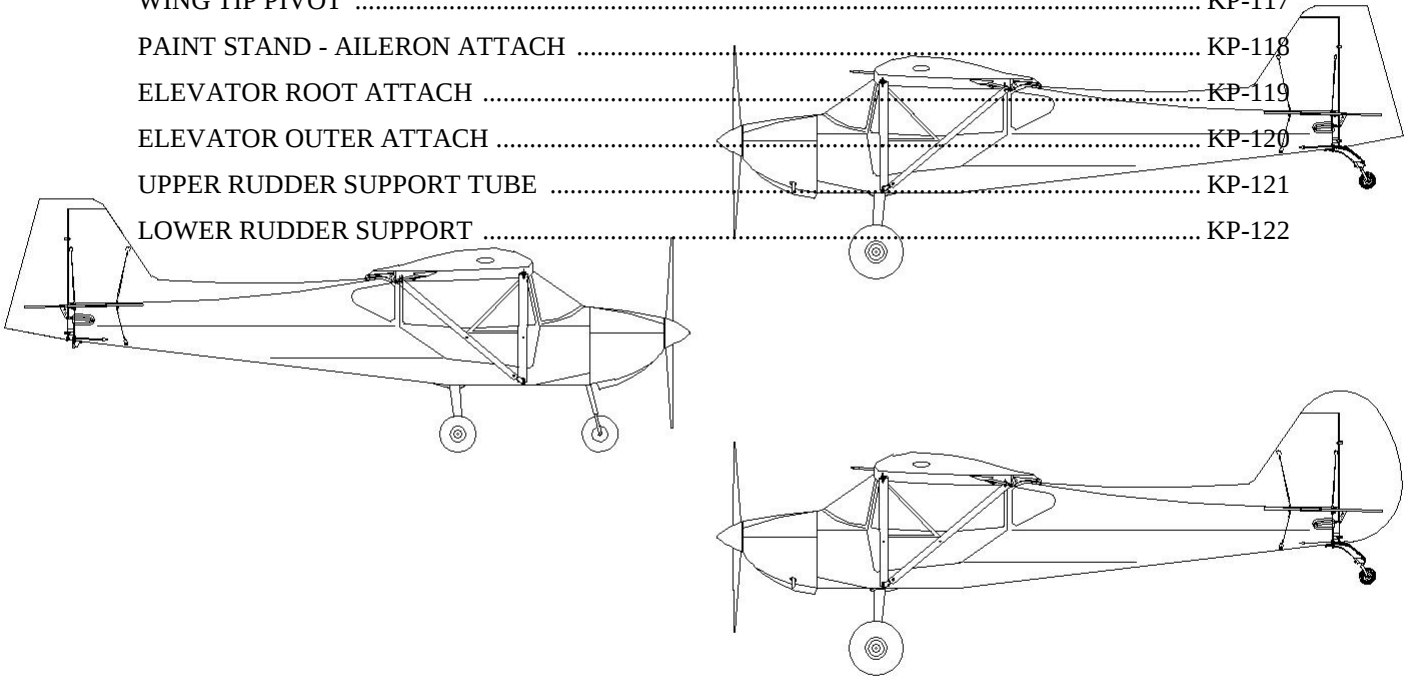 

11 - RIGGING

ELEVATOR MASS BALANCE	11-03
ELEVATOR MASS BALANCE WEIGHT AND ATTACH	11-04
WING WASH OUT RIGGING LEVEL	11A-01
AILERON RIGGING	11A-09
AILERON RIGGING BOARD	11A-11
CONTROL SURFACE RIGGING CLEARANCES - TAIL	11B-09
PARK BRAKE RIGGING	11C-04

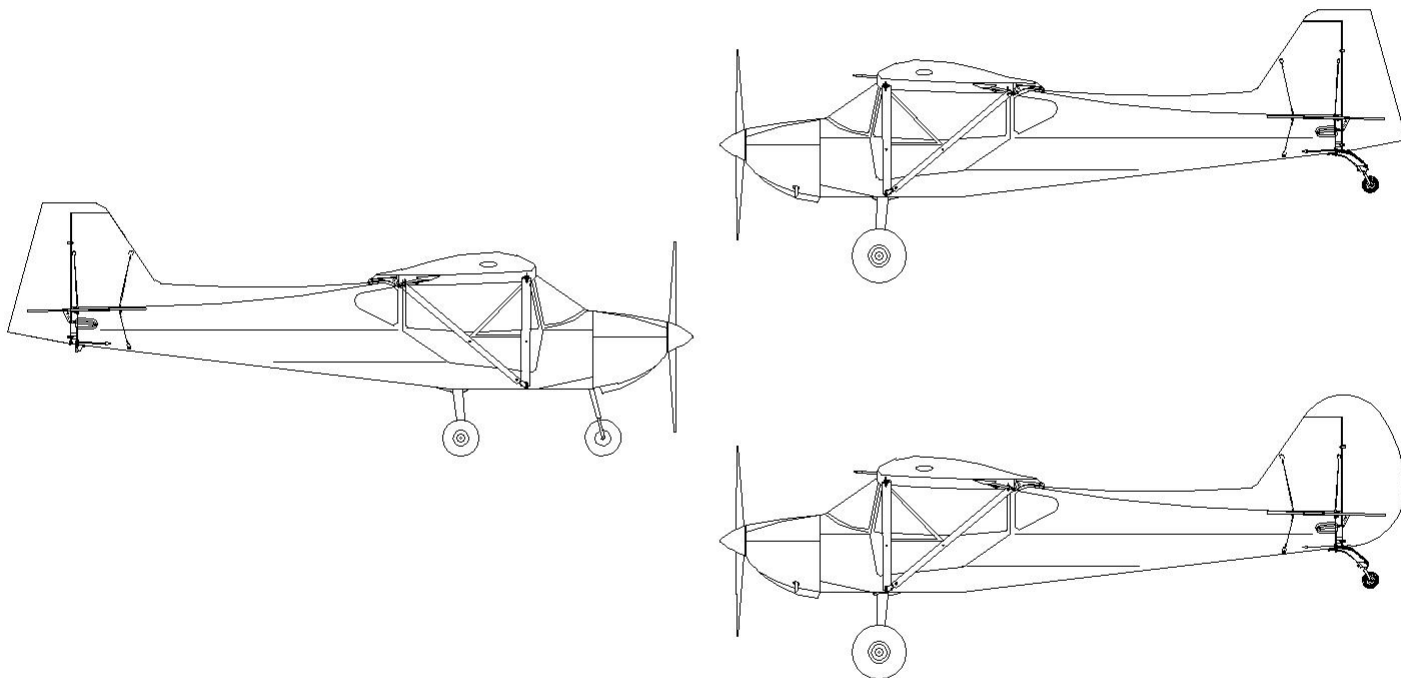 

12 - WEIGHT & BALANCE

STANDARD RANS TAILWHEEL 12-01

TRIKE12-01A

OPTIONAL 10" TAILWHEEL12-01B

WEIGHT & BALANCE RECORD 12-02

